


MCS-PHASE-B

3 Phase Voltage Monitor

Wiring Diagram

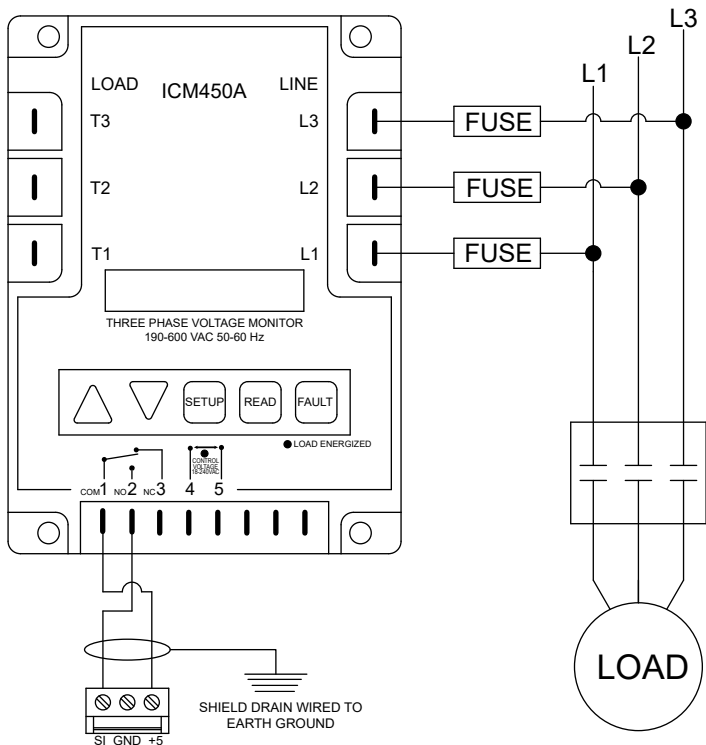

5580 Enterprise Pkwy, Fort Myers, FL 33905 USA
Phone: (239) 694 0089 - Fax: (239) 694 0031
www.mcscontrols.com - support@mcscontrols.com
MCS-PHASE-B Wiring Diagram (2022-02-04).dwg

MICRO
CONTROL
SYSTEMS