



Revision 04-13-2021

## RC-UNLOAD SOLENOID KIT NC

(Normally Closed)
















					_
A 11	$\square \land \blacktriangle$	IBFI I	MAC	NEI	C
AII	DAN	ibei i	IVIL	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	

All HAMBLLE MODLLS						
PART #	DESCRIPTION	QUANTITY				
3101-1003BA-A	Gasket	2				
4301-804012	Bolts M4 x M12 (for use with NO orifice plate)	4				
4301-804020	Bolt for solenoid valve (for use WITH orifice plate)	4				
RC-SOLENOID GASKET	Water Proof Solenoid Gasket Kit	1				
4401-167	Normally Closed (NC) Solenoid Valve	1				
4402-15 / 4402-GB62	Solenoid valve coil only 12W 110v / 220v	1				

## **Packaging**



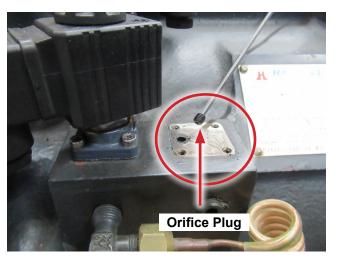

For the unload solenoid you can have 2 types of configurations, one which uses the orifice plate or one that uses the orifice plug. If you are using infinite capacity unloading(pulsing) you would leave these restrictions in place to slow down the unloading. If you are set up for step unloading(on/off) these restrictions should have been removed. Replace the existing solenoid with the new solenoid and 2 gaskets for the orifice plate or 1 gasket for the orifice plug.