



RC-Suction Kits

RC-SUCT FIL KIT #1

RC10 and RC11, RC2-100, RC2-140

PART #	DESCRIPTION	QUANTITY
3131-1004AA	Gasket	3
3131-1024BC	200 mesh suction filter	1

RC-SUCT FIL KIT #2

RC12 and RC13, RC2-170 ~ RC2-200

PART #	DESCRIPTION	QUANTITY
3101-1004AD	Gasket	3
3101-1024DC	200 mesh suction filter	1

RC-SUCT FIL KIT #3

RC14 ~ RC15L, RC2-230 ~ RC2-320

PART #	DESCRIPTION	QUANTITY
3103-1004AD	Gasket	3
3103-1024DB	200 mesh suction filter	1

RC-SUCT FIL KIT #4

RC16 ~ RC18, RC2-340 ~ RC2-580

PART #	DESCRIPTION	QUANTITY
3105-1004AD	Gasket	3
3105-1024DC	200 mesh suction filter	1

RC-SUCT FIL KIT #5

RC19 ~ RC21, RC2-610, RC2-710 ~ RC2-930

PART #	DESCRIPTION	QUANTITY
3107-1004AC	Gasket	3
3107-1024B	200 mesh suction filter	1

RC-SUCT FIL KIT #6

RC2-620

PART #	DESCRIPTION	QUANTITY
3105-1004AD	Gasket	3
3158-1024BC	200 mesh suction filter	1



The suction filter stops contamination at the suction inlet providing extended lifetime of the screw rotors, oil filter, oil, suction and discharge valve and the piston rings.

Please refer to the RC2 Maintenance Manual for directions on replacing the suction filter.