



APPLICATION NOTE

APP125

Revision History

Date	Author	Description
2-8-17	DEW	Changing Ethernet IP address on MAGNUM

Changing the Ethernet IP address on the MCS-MAGNUM

Any questions regarding this release, contact: support@mcscontrols.com

Micro Control Systems, Inc. 5580 Enterprise Parkway Fort Myers, Florida 33905
(239)694-0089 FAX: (239)694-0031 www.mcscontrols.com

Information contained in this document has been prepared by Micro Control Systems, Inc. and is copyright © protected 2016.
Copying or distributing this document is prohibited unless expressly approved by MCS.

If you need to change the Ethernet IP address or subnet on the Magnum because of a conflict follow the instructions below.


A conflict usually involves the last 3 digits of the address.

You can use the MCS-KEYPAD or MCS-CONNECT to make this change.


1.1. Using MCS-CONNECT

Start by gathering the correct network information for your plant, including the Ethernet IP address and the Subnet address.

1. Open MCS-CONNECT
2. Connect to the MAGNUM or MicroMag controller that needs to be changed.
3. **YOU MUST BE AUTHORIZED TO MAKE THIS CHANGE.**
4. Once on the MCS-CONNECT status screen, click on the 'VIEW' tab at the stop of your screen.
5. Click on 'SERVICE WINDOW'

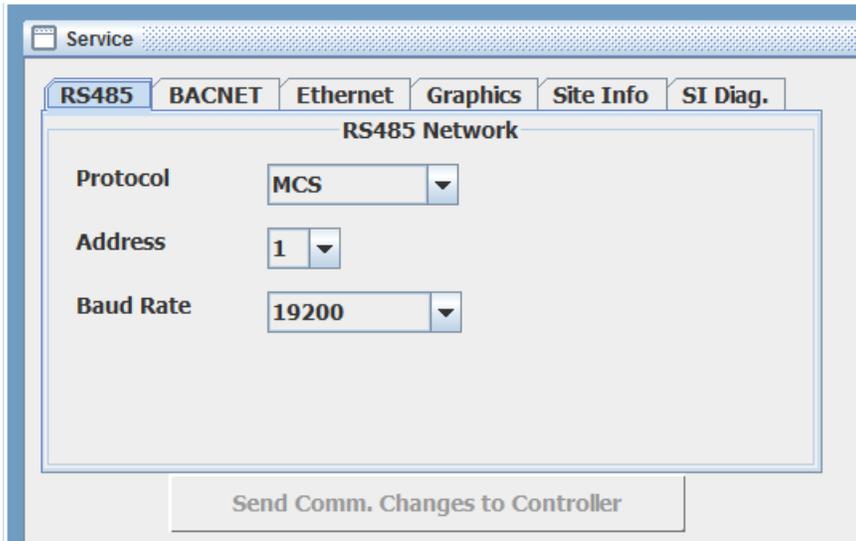

6. Click on 'ETHERNET'

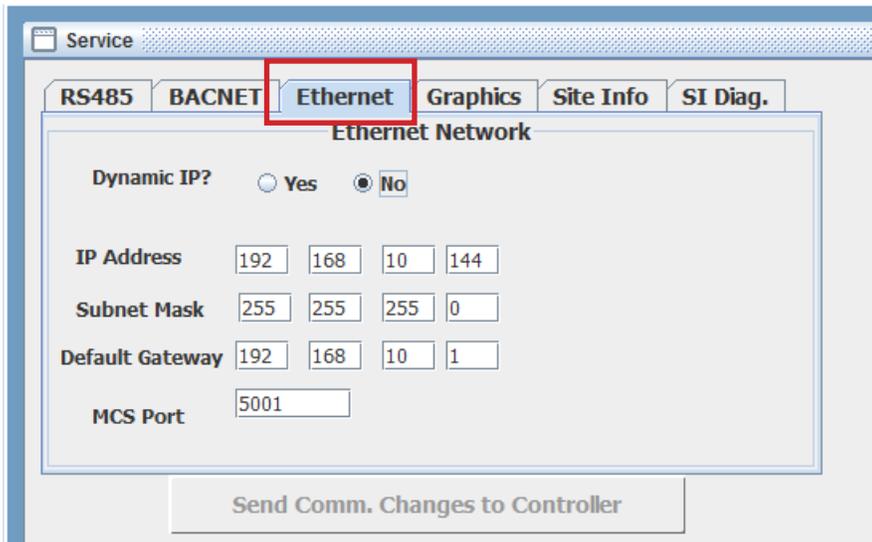


7. Make the necessary changes and click the button "SEND COMM. CHANGES TO THE CONTROLLER.
8. **YOU MUST 'RESET THE MAGNUM BY PUSHING THE RESET BUTTON ON THE MAGNUM.**


1.2. Using MCS-KEYPAD

Determining and Changing the Network Address of a Magnum YOU MUST BE AUTHORIZED TO MAKE THIS CHANGE


1. First, at the Main Menu use the arrow keys to navigate to **Serv Tools**:

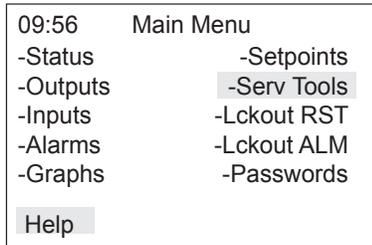


2. Next, press the Enter key. You will see the following:

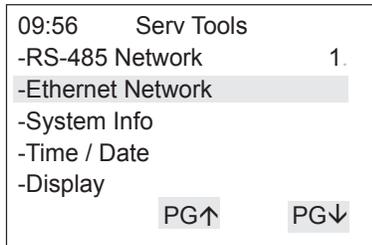

3. Use the up and down arrow keys to highlight **Address**:

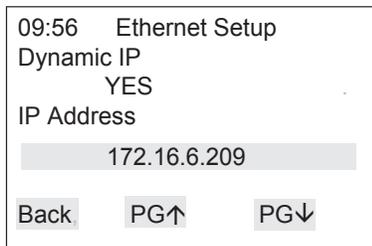


4. Now press the Enter key. You should see something similar to the following:

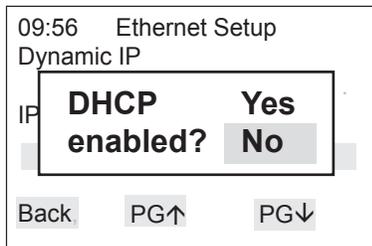


5. Use the up and down arrow keys to highlight **NO**:
DHCP WILL BE DISABLED


6. Next screen will show as below:

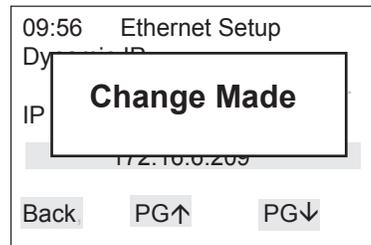

7. Use the up and down arrow keys to highlight the IP Address:

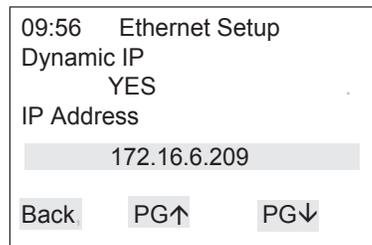

8. The cursor will highlight the first 3 characters to change: If you have a conflict change the last 3 numbers. Use the up and down arrow keys to change. Press the enter key when you have the change made.

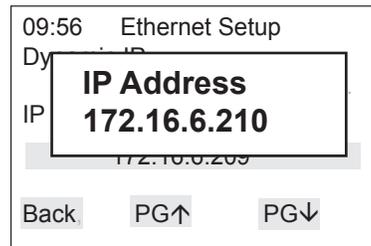

9. Next screen will show as below:

