



MCS-CT100, 250, 500, 800, 1500 Current Transformer Wiring Diagram

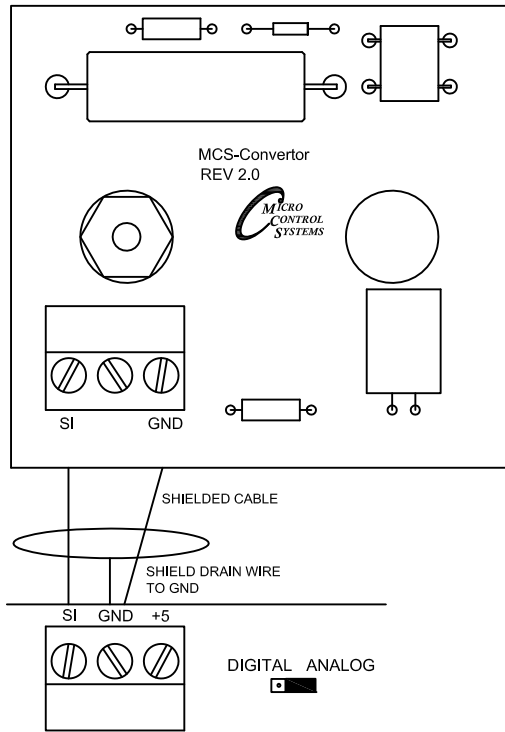

5580 Enterprise Pkwy, Fort Myers, FL 33905 USA
 Phone: (239) 694 0089 - Fax: (239) 694 0031
www.mcscontrols.com - support@mcscontrols.com
 MCS-PHASE Wiring Diagram (2012-09-25).dwg




MCS-CT100, 250, 500, 800, 1500 Current Transformer Wiring Diagram

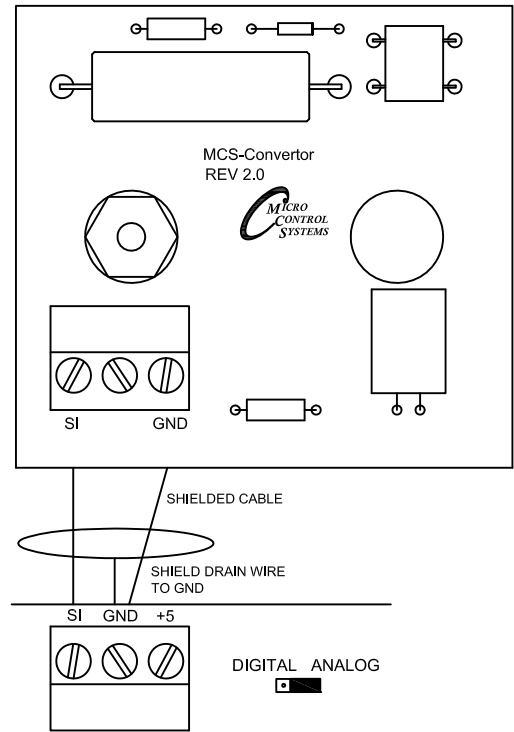

5580 Enterprise Pkwy, Fort Myers, FL 33905 USA
 Phone: (239) 694 0089 - Fax: (239) 694 0031
www.mcscontrols.com - support@mcscontrols.com
 MCS-PHASE Wiring Diagram (2012-09-25).dwg




MCS-CT100, 250, 500, 800, 1500 Current Transformer Wiring Diagram

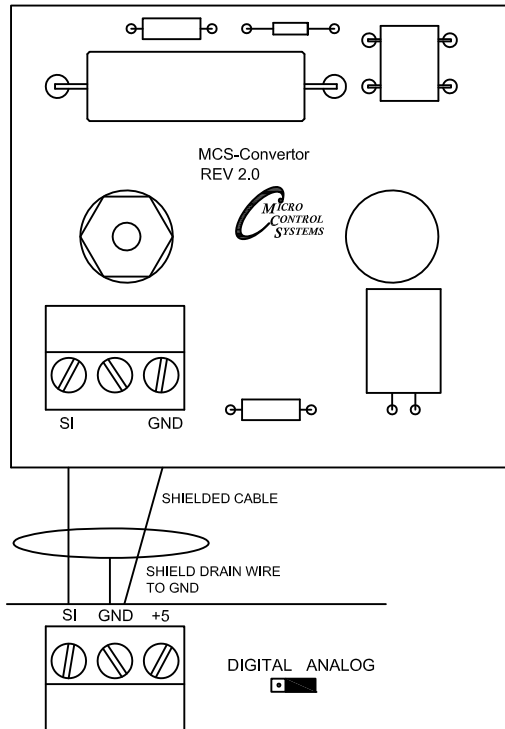

5580 Enterprise Pkwy, Fort Myers, FL 33905 USA
 Phone: (239) 694 0089 - Fax: (239) 694 0031
www.mcscontrols.com - support@mcscontrols.com
 MCS-PHASE Wiring Diagram (2012-09-25).dwg



MCS-CT100, 250, 500, 800, 1500 Current Transformer Wiring Diagram

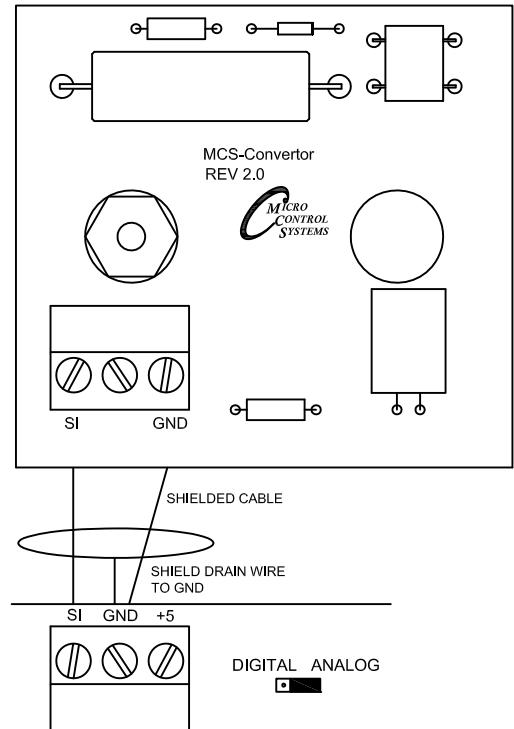

5580 Enterprise Pkwy, Fort Myers, FL 33905 USA
 Phone: (239) 694 0089 - Fax: (239) 694 0031
www.mcscontrols.com - support@mcscontrols.com
 MCS-PHASE Wiring Diagram (2012-09-25).dwg

