

MCS-WIRELESS-MODEM-INT WIRING INSTRUCTIONS

MCS-CONNECT setup to access job site

Example MAGNUM #1 address
Static IP: 192.168.18.101
Subnet mask: 255.255.255.0
Default Gateway: 191.168.18.1
TCP/IP Port: 5001

Connect to proper power supply
 International adapters supplied
 100-240V 50/60hz

Ethernet Cable (supplied)

NOTE: Antenna must be mounted in an open spot as close to an outside source to receive good communication.

DO NOT MOUNT ANTENNA INSIDE AN ENCLOSURE

Sim Card (Standard) (not supplied)

MCS-WIRELESS-MODEM-INT

Connect to multiple MAGNUMS using an Ethernet hub and DYNAMIC IP, see below to setup.



(Each MAGNUM must have a unique address.)

To setup using DYNAMIC IP, open MCS-CONNECT;

1. Click the tab for 'SETUP'
2. Click 'NETWORK'
3. Click on 'SHOW ALL NETWORK INTERFACES'
4. Click on 'DIACom Ethernet Adapter'
5. Save
6. Click 'ETHERNET' when signing on for your controller, a unique DYNAMIC IP address will be assigned.

MAGNUM #1

MAGNUM #2

