





MAKE SURE POWER IS TURNED OFF TO THE UNIT PRIOR TO INSTALLING MCS-EXPLOSION PROOF TRANSDUCER

DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS.

MCS-XXX-XP Explosion proof Pressure Transducer/Transmitter is CSA approved for use in hazardous areas including:

- CSA 30 (UL1203/FM3615) Class 1 Zone 1 Group IIC
- CSA 30 Class 1 Div 1 Groups A, B, C, D Explosionproof
- CSA 30 Class 2 Div 1 Groups E, F, G Dust Ignition-proof The AST4600 explosion-proof pressure transmitter is CSA Class I Division 1 approved for use in hazardous areas.

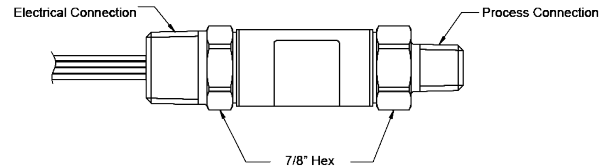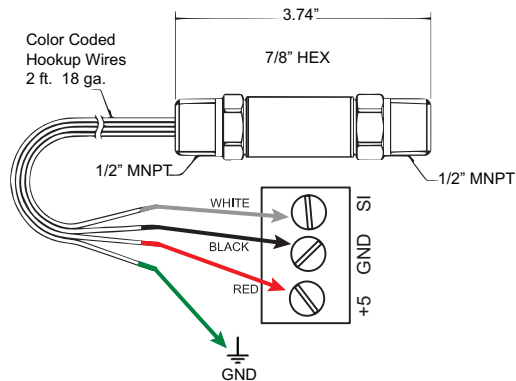

5580 Enterprise Pkwy. Fort Myers, FL 33905

Office: 239-694-0089 Fax: 239-694-0031 www.mcsccontrols.com

Revision 2015-06-02





MAKE SURE POWER IS TURNED OFF TO THE UNIT PRIOR TO INSTALLING MCS-EXPLOSION PROOF TRANSDUCER

DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS.

MCS-XXX-XP Explosion proof Pressure Transducer/Transmitter is CSA approved for use in hazardous areas including:

- CSA 30 (UL1203/FM3615) Class 1 Zone 1 Group IIC
- CSA 30 Class 1 Div 1 Groups A, B, C, D Explosionproof
- CSA 30 Class 2 Div 1 Groups E, F, G Dust Ignition-proof The AST4600 explosion-proof pressure transmitter is CSA Class I Division 1 approved for use in hazardous areas.

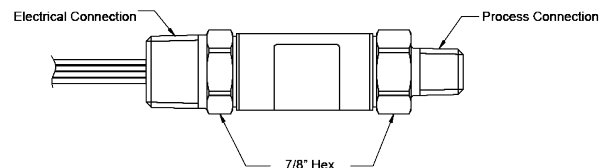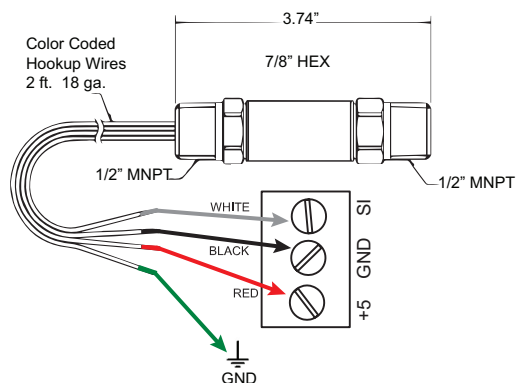

5580 Enterprise Pkwy. Fort Myers, FL 33905

Office: 239-694-0089 Fax: 239-694-0031 www.mcsccontrols.com

Revision 2015-06-02