


MCS-HUMD/MCS-HUMD-OVR

Humidity/Temperature

Sensor Wiring Diagram

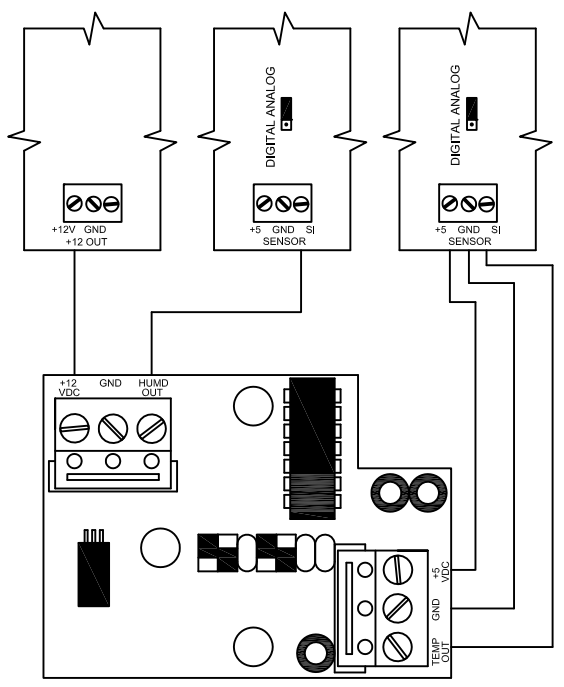


5877 Enterprise Pkwy, Fort Myers, FL 33905 USA
 Phone: (239) 694 0089 - Fax: (239) 694 0031
 www.mcscontrols.com - support@mcscontrols.com
 MCS-HUMD Wiring Diagram (2012-06-08).dwg



MCS-HUMD/MCS-HUMD-OVR

Humidity/Temperature

Sensor Wiring Diagram

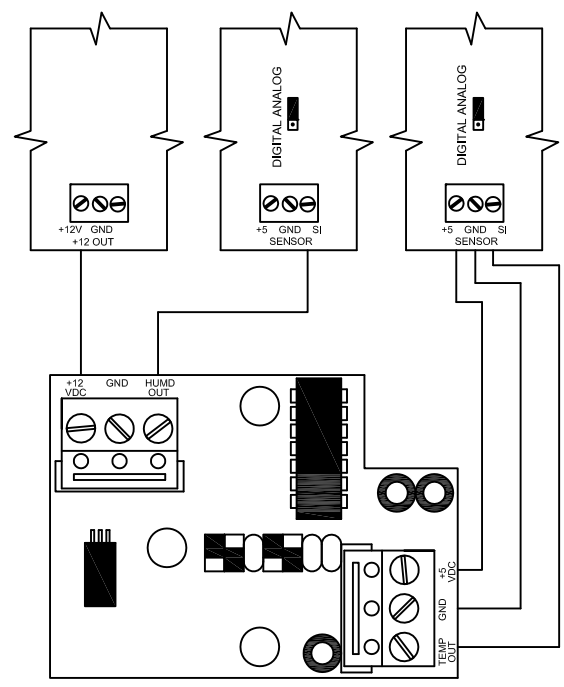


5877 Enterprise Pkwy, Fort Myers, FL 33905 USA
 Phone: (239) 694 0089 - Fax: (239) 694 0031
 www.mcscontrols.com - support@mcscontrols.com
 MCS-HUMD Wiring Diagram (2012-06-08).dwg



MCS-HUMD/MCS-HUMD-OVR

Humidity/Temperature

Sensor Wiring Diagram

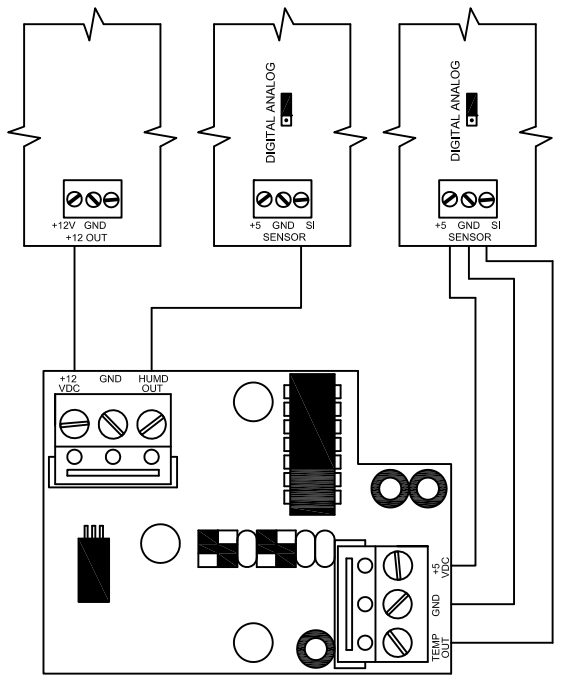


5877 Enterprise Pkwy, Fort Myers, FL 33905 USA
 Phone: (239) 694 0089 - Fax: (239) 694 0031
 www.mcscontrols.com - support@mcscontrols.com
 MCS-HUMD Wiring Diagram (2012-06-08).dwg



MCS-HUMD/MCS-HUMD-OVR

Humidity/Temperature

Sensor Wiring Diagram

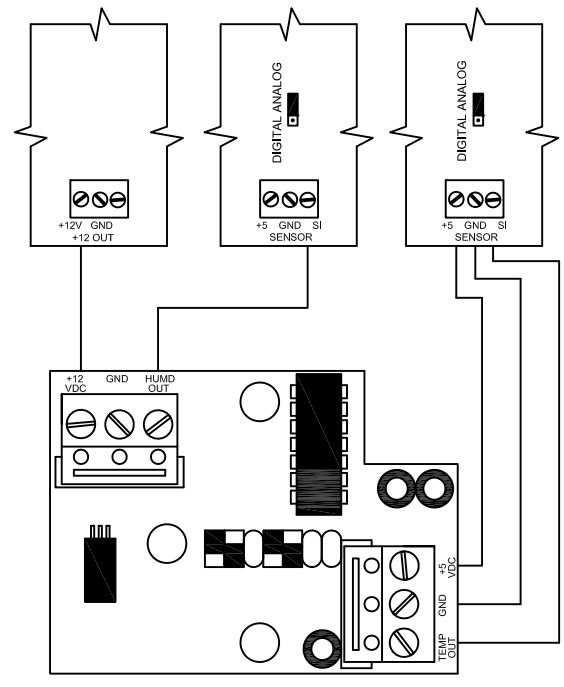

5877 Enterprise Pkwy, Fort Myers, FL 33905 USA
 Phone: (239) 694 0089 - Fax: (239) 694 0031
 www.mcscontrols.com - support@mcscontrols.com
 MCS-HUMD Wiring Diagram (2012-06-08).dwg

