


MCS-HUMD-II-OVR-T/R

Temp/Humd Sensor

Wiring Diagram

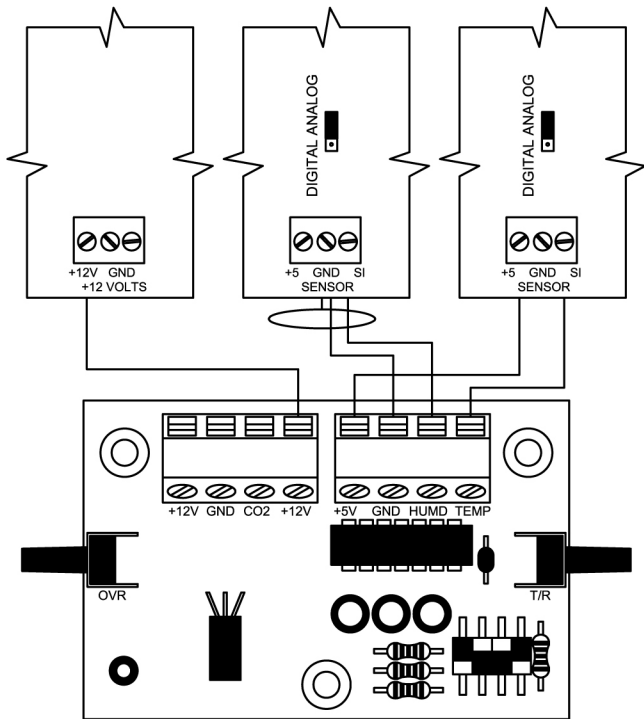

5580 Enterprise Pkwy, Fort Myers, FL 33905 USA
Phone: (239) 694 0089 - Fax: (239) 694 0031
www.mcscontrols.com - support@mcscontrols.com

MCS-HUMD-II-OVR-T/R Wiring Diagram (2014-04-30).dwg

**MICRO
CONTROL
SYSTEMS**