



MAG-KEYPAD-REPLACEMENT

The MAG-KEYPAD-REPLACEMENT IS A DIRECT REPLACEMENT FOR OLDER MAG KEYPADS



MAG-KEYPAD-REPLACEMENT WORKS WITH ANY MCS-MAGNUM FIRMWARE



NOTE MAG-KEYPAD- REPLACEMENT is shipped assembled except for Keypad cable.

Tools needed for removal:

- 5/16" Nut Driver



FRONT




BACK



KEYPAD CABLE to MCS-MAGNUM

REPLACEMENT OF OLD KEYPAD


- 1 STOP THE UNIT (RUN/STOP SWITCH TO OFF POSITION)
- 2 TURN POWER OFF TO THE UNIT
- 3 UNPLUG CABLE FROM MCS-MAGNUM AND FROM OLD KEYPAD.

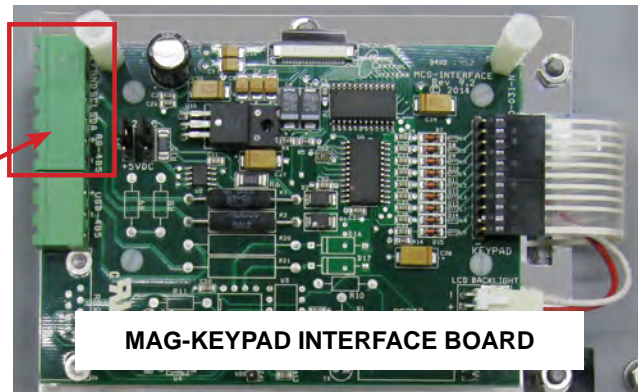

MAG-KEYPAD INTERFACE BOARD

4 Removal of Old MAG-KEYPAD

MAG-KEYPAD PANL

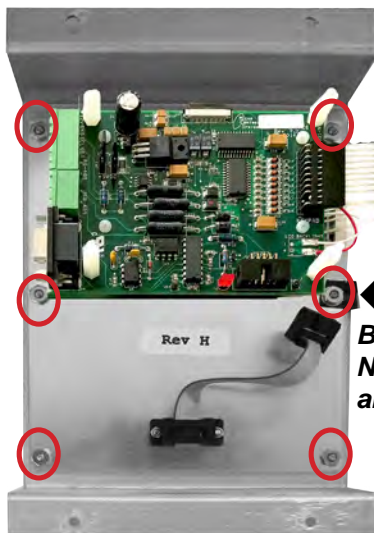


REV H KEYPAD
Remove 6 nuts from old Keypad MAG-DOOR or MAG-KEYPAD-PANL.
Unplug the RS232 if installed.



BE SURE TO GROUND NEW KEYPAD-Attach nut and washer



MAG-KEYPAD DOOR

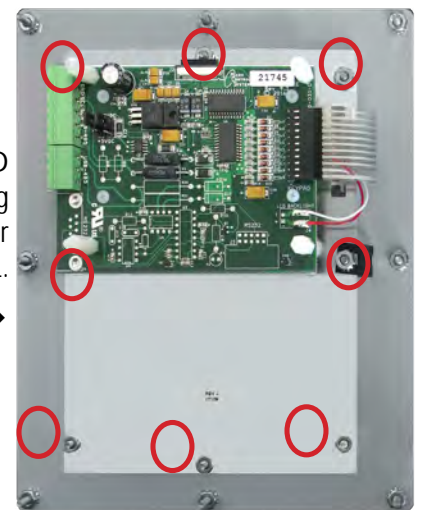

REV J KEYPAD
Remove 8 nuts holding old Keypad from MAG-DOOR or MAG-KEYPAD-PANL.



- 5 INSTALL MAG-KEYPAD-REPLACEMENT IN SAME BRACKET BE SURE TO GROUND NEW MAG-KEYPAD-REPLACEMENT