


MCS-HUMD-II-OVR

Temp/Humd Sensor

Wiring Diagram

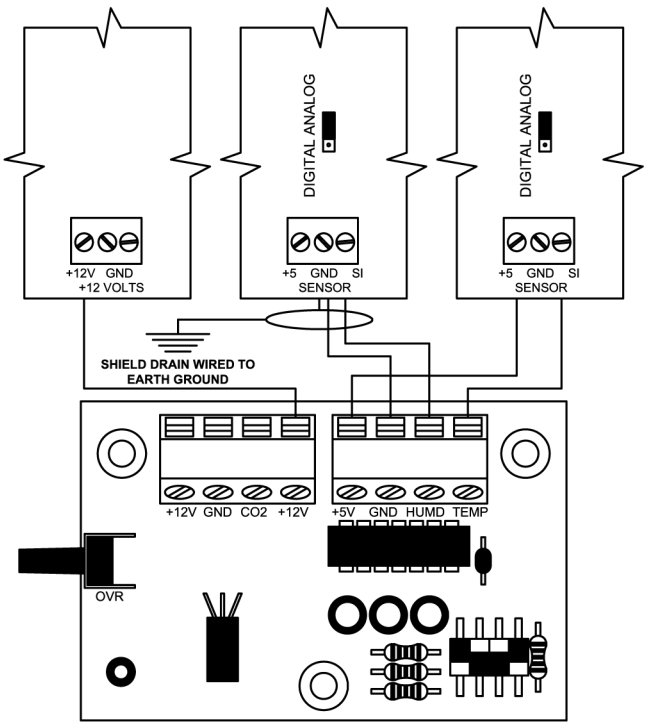

5580 Enterprise Pkwy, Fort Myers, FL 33905 USA
Phone: (239) 694 0089 - Fax: (239) 694 0031
www.mcsccontrols.com - support@mcsccontrols.com

