

### **MAG-KEYPAD-REPLACEMENT**

## THE MAG-KEYPAD-REPLACEMENT IS A DIRECT REPLACEMENT FOR OLDER MAG KEYPADS

# Mag-Keypad-Replacement REV 11.4R and greater jumper at J4 set to +12VDC when shipped from factory

Any MCS-Magnum HW REV 7.0 or greater or HW REV 5.5 (these will have Mag-Keypad interface rev 7.0 or greater) needs the jumper on Mag-Keypad-Replacement set to +12 VDC as shown below (default from factory).





# FIGURE 2 MAG-KEYPAD-REPLACEMENT

(J4 Pins populated for +12 VDC. top two pins covered (Magnum HW REV 7 or higher, )




# INSTRUCTIONS FOR USING THE MAG-KEYPAD-REPLACEMENT REV 11.4R AND ABOVE WITH OLDER MAGNUMS

Any MCS-Magnum less than HW REV 7.0, <u>excluding HW REV 5.5</u> (These will have a Mag-Keypad interface less than REV 7.0) needs to have the jumper set for +5 VDC as shown below.





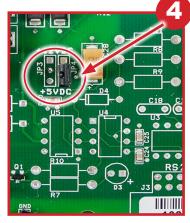

## FIGURE 4 MAG-KEYPAD-REPLACEMENT

(J4 Pins populated for +5 VDC, top pin not covered (Magnum HW less than Rev 7) Excluding HW REV 5.5

SEE REVERSE SIDE FOR INSTALLING MCS-KEYPAD-REPLACEMENT



## **MAG-KEYPAD-REPLACEMENT**

THE MAG-KEYPAD-REPLACEMENT IS A DIRECT REPLACEMENT FOR **OLDER MAG KEYPADS** 



#### MAG-KEYPAD-REPLACEMENT WORKS WITH ANY MCS-MAGNUM FIRMWARE



**NOTE: MAG-KEYPAD- REPLACEMENT** is shipped assembled, except for Keypad cable.

#### Tools needed for removal:

5/16" Nut Driver







**FRONT** 

**BACK** 

#### REPLACEMENT OF OLD KEYPAD

STOP THE UNIT (RUN/STOP SWITCH TO OFF POSITION)



- TURN POWER OFF TO THE UNIT
- **UNPLUG CABLE FROM MCS-MAGNUM AND** FROM OLD KEYPAD.

# KEYPAD INTERFACE BOARD

#### Removal of Old MAG-KEYPAD

MAG-KEYPAD PANL

# BE SURE TO GROUND NEW KEYPAD-Attach nut and washer

#### **REV H KEYPAD**

Remove 6 nuts from old Keypad MAG-DOOR or MAG-KEYPAD-PANL. Unplug the RS232 if installed.

**REV J KEYPAD** 

Remove 8 nuts holding old Keypad from MAG-DOOR or MAG-KEYPAD-PANL. MAG-KEYPAD DOOR



INSTALL MAG-KEYPAD-REPLACEMENT IN SAME BRACKET BE SURE TO GROUND NEW MAG-KEYPAD-REPLACEMENT