



SOFTWARE RELEASE NOTES

MCS-CONFIG Version 14.00L 07/29/2013

Updates from previous versions:

New Features:

1. In ALL config types V14 on the MAG INFO screen under the General Info section under the Unit Indicators section adding a new RO drop down list called Unit Status Relay.
2. In RTU config types V14 on the MAG RTU screen under the Ventilation Info section on the Energy Recovery Wheel panel adding two new fields for selecting points: ERW Bypass RO and ERW Bypass AO.
3. In ALL config types V14 on the AO Info Screen under the Control Type column adding a new type called 2-10vdc.
4. In ALL config types V14 on the AO Info Screen under the type column when a Linear CTRL is selected the Wizard Popup will now have two new types of operands in the operand drop down list box: The current Fixed Value name will be changed to Fixed Value 1 and the two new ones will be Fixed Value 0(index #31) and Fixed Value 2(index #32). These two new operands will make the divisor/multiplier for the fixed value either a 1 or a 100.
5. In ALL config types V14 on the SI Info Screen under the type column when a User Logic is selected the Wizard Popup will now have two new types of operands in the operand drop down list box: The current Fixed Value name will be changed to Fixed Value 1 and the two new ones will be Fixed Value 0(index #31) and Fixed Value 2(index #32). These two new operands will make the divisor/multiplier for the fixed value either a 1 or a 100.

Any questions regarding this release, contact:
support@mcscontrols.com

Micro Control Systems, Inc. 5580 Enterprise Parkway Fort Myers, Florida 33905
(239)694-0089 FAX: (239)694-0031 www.mcscontrols.com

Information contained in this document has been prepared by Micro Control Systems, Inc. and is copyright © protected 2013. Copying or distributing this document is prohibited unless expressly approved by MCS.

6. In ALL config types on the BMS POINTS screen when the csv file is created the Lontalk Config file will now print at the beginning before the Sensor Outputs start for the Client side-Client Side Map Descriptors-Magnum BACnet IP. On the server side it will print-Server Side Map Descriptors-Fieldserver Lontalk.
7. In ALL config types on the printer wizard popup, adding a new checkbox with this caption: Unit/Compressor State Charts which will allow the user to just print the state charts instead of having to print all of the BMS points to get the state charts.

Bug Fixes:

1. In ALL config types V14 when a V11 config is converted to a V14 config version the system graphic file location field on the Setup screen shows garbage ascii characters if there is not a file path saved in the V11 file. Resolution: Test the file path in the V11 file and if it is not a valid path then clear out the memory location.
2. In ALL config types on the Print Wizard popup modifying the caption for the BMS points.
3. In ALL config types on the BMS POINTS screen under the writable points section moving all of the optional MCS-BMS-GATEWAY points for the network, SI, and Setpoints to the bottom of the screen.

Any questions regarding this release, contact:
support@mcscontrols.com

Micro Control Systems, Inc. 5580 Enterprise Parkway Fort Myers, Florida 33905
(239)694-0089 FAX: (239)694-0031 www.mcscontrols.com

Information contained in this document has been prepared by Micro Control Systems, Inc. and is copyright © protected 2013. Copying or distributing this document is prohibited unless expressly approved by MCS.