



RELEASE NOTES

MCS-CONFIG Version 9.03DD 10/11/2012

Updates from previous versions:

New Features:

1. In HVAC, CENT, RTU config types on the MAG HVAC, MAG CENT, and MAG RTU screen under the compressor section currently when the User selects TurboCor as the compressor type an AO drop down box is displayed to select an AO for the load balance valve. Now when the user selects TurboCor as the compressor type a panel will be displayed with a caption that reads "TurboCor Setting".
 - a. On this panel will be two selections: Staging and Load Balance Valve. If the load balance valve is selected then the AO load balance valve will be displayed as usual and column 10(Comp. Start Speed AO) on the circuit base screen will have the same caption but if the Staging is selected then the AO load balance valve drop down will be hidden and column 10(Comp. Start Speed AO) on the circuit base screen will change the caption to Staging Valve AO.

Bug Fixes:

1. In MicroMag config types on the setpoint grid when the user clicks in the MIN, Zone MIN, MAX ROC MIN Limit, MIN ADJ% Value, MIN ADJ% Limit, MIN Capacity% Value or MIN Capacity% Limit columns and the value is a 0 the application removes the 0 for easier usability. If the user does not enter a value then an error occurs. Resolution: Do not remove the 0 when the user clicks in the cell.

Any questions regarding this release, contact:
support@mcscontrols.com

Micro Control Systems, Inc. 5580 Enterprise Parkway Fort Myers, Florida 33905
(239)694-0089 FAX: (239)694-0031 www.mcscontrols.com

Information contained in this document has been prepared by Micro Control Systems, Inc. and is copyright © protected 2012. Copying or distributing this document is prohibited unless expressly approved by MCS.