


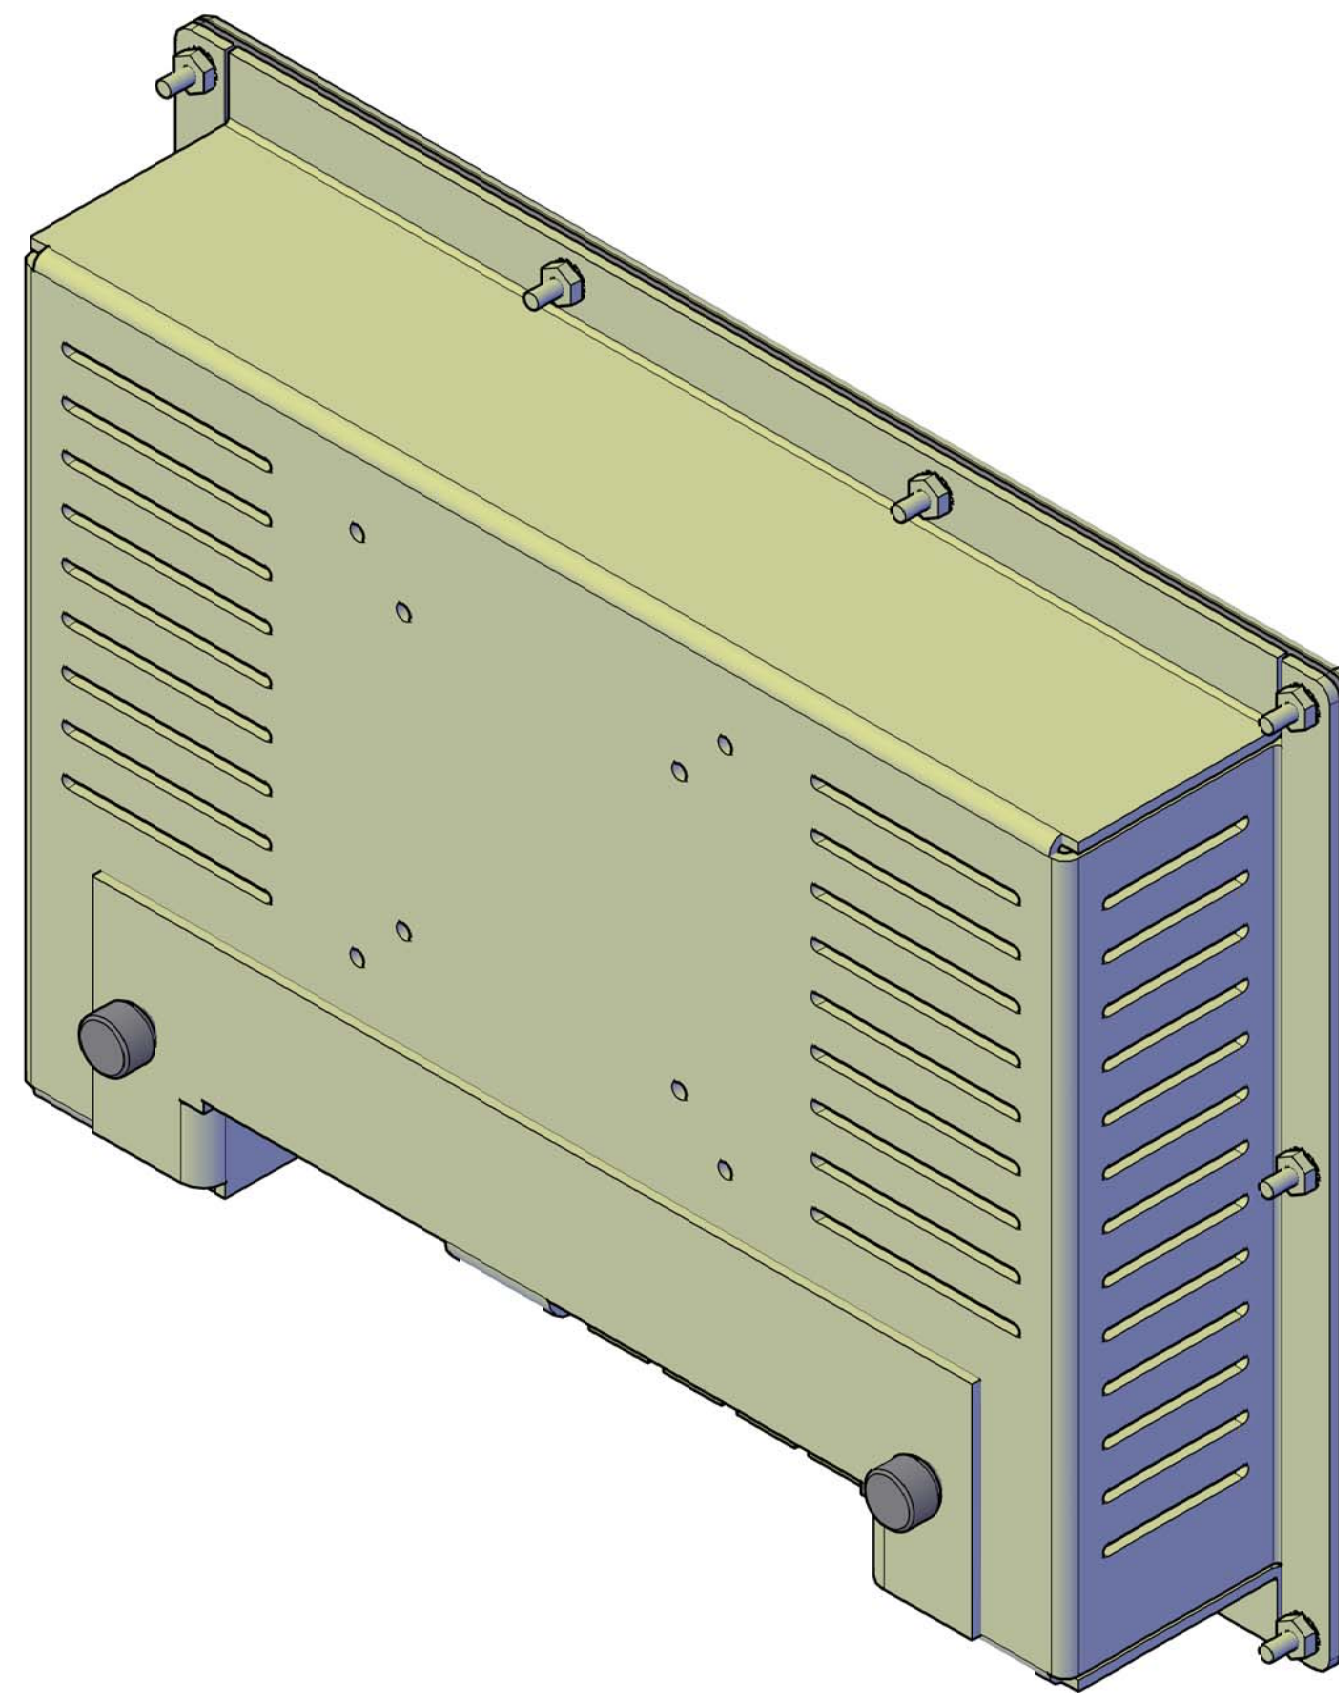


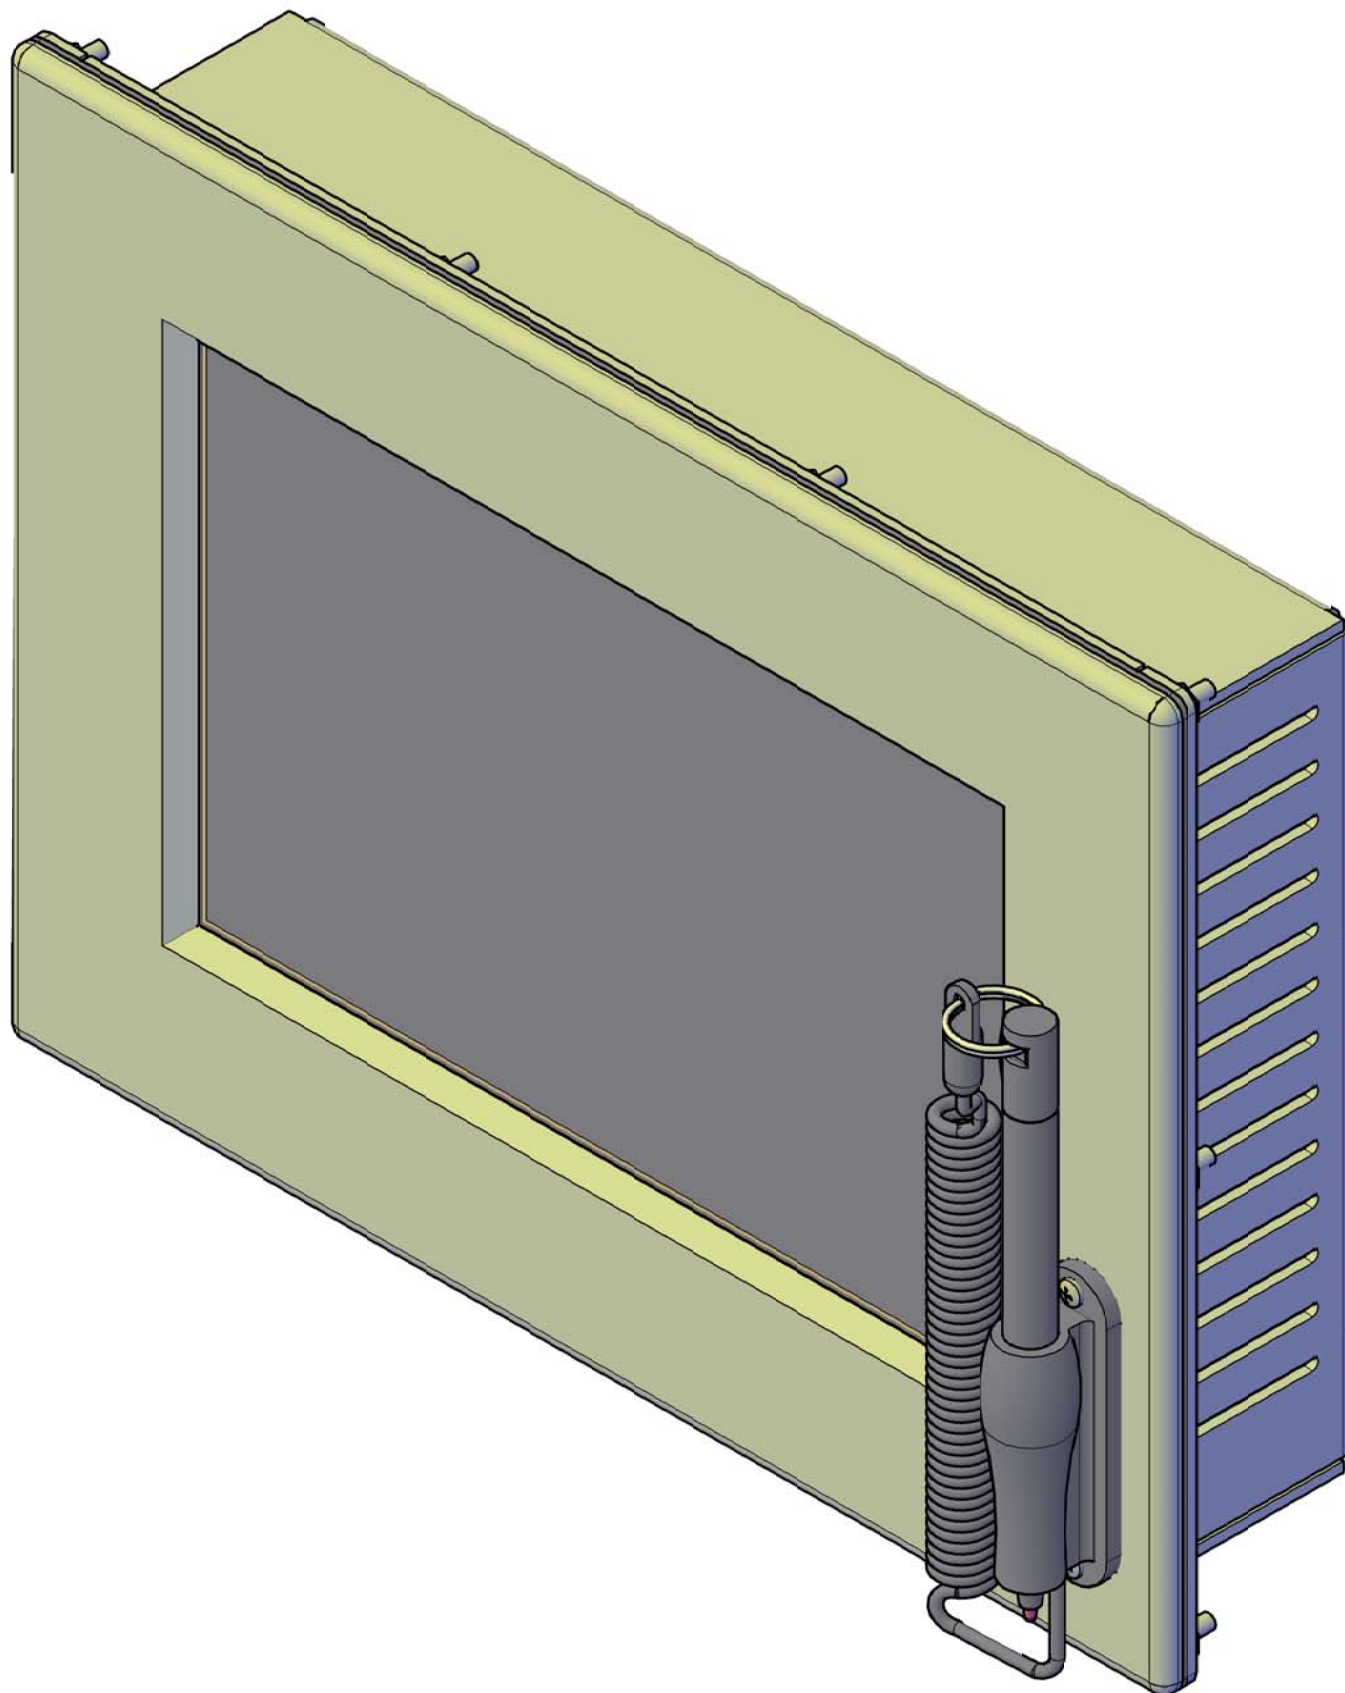

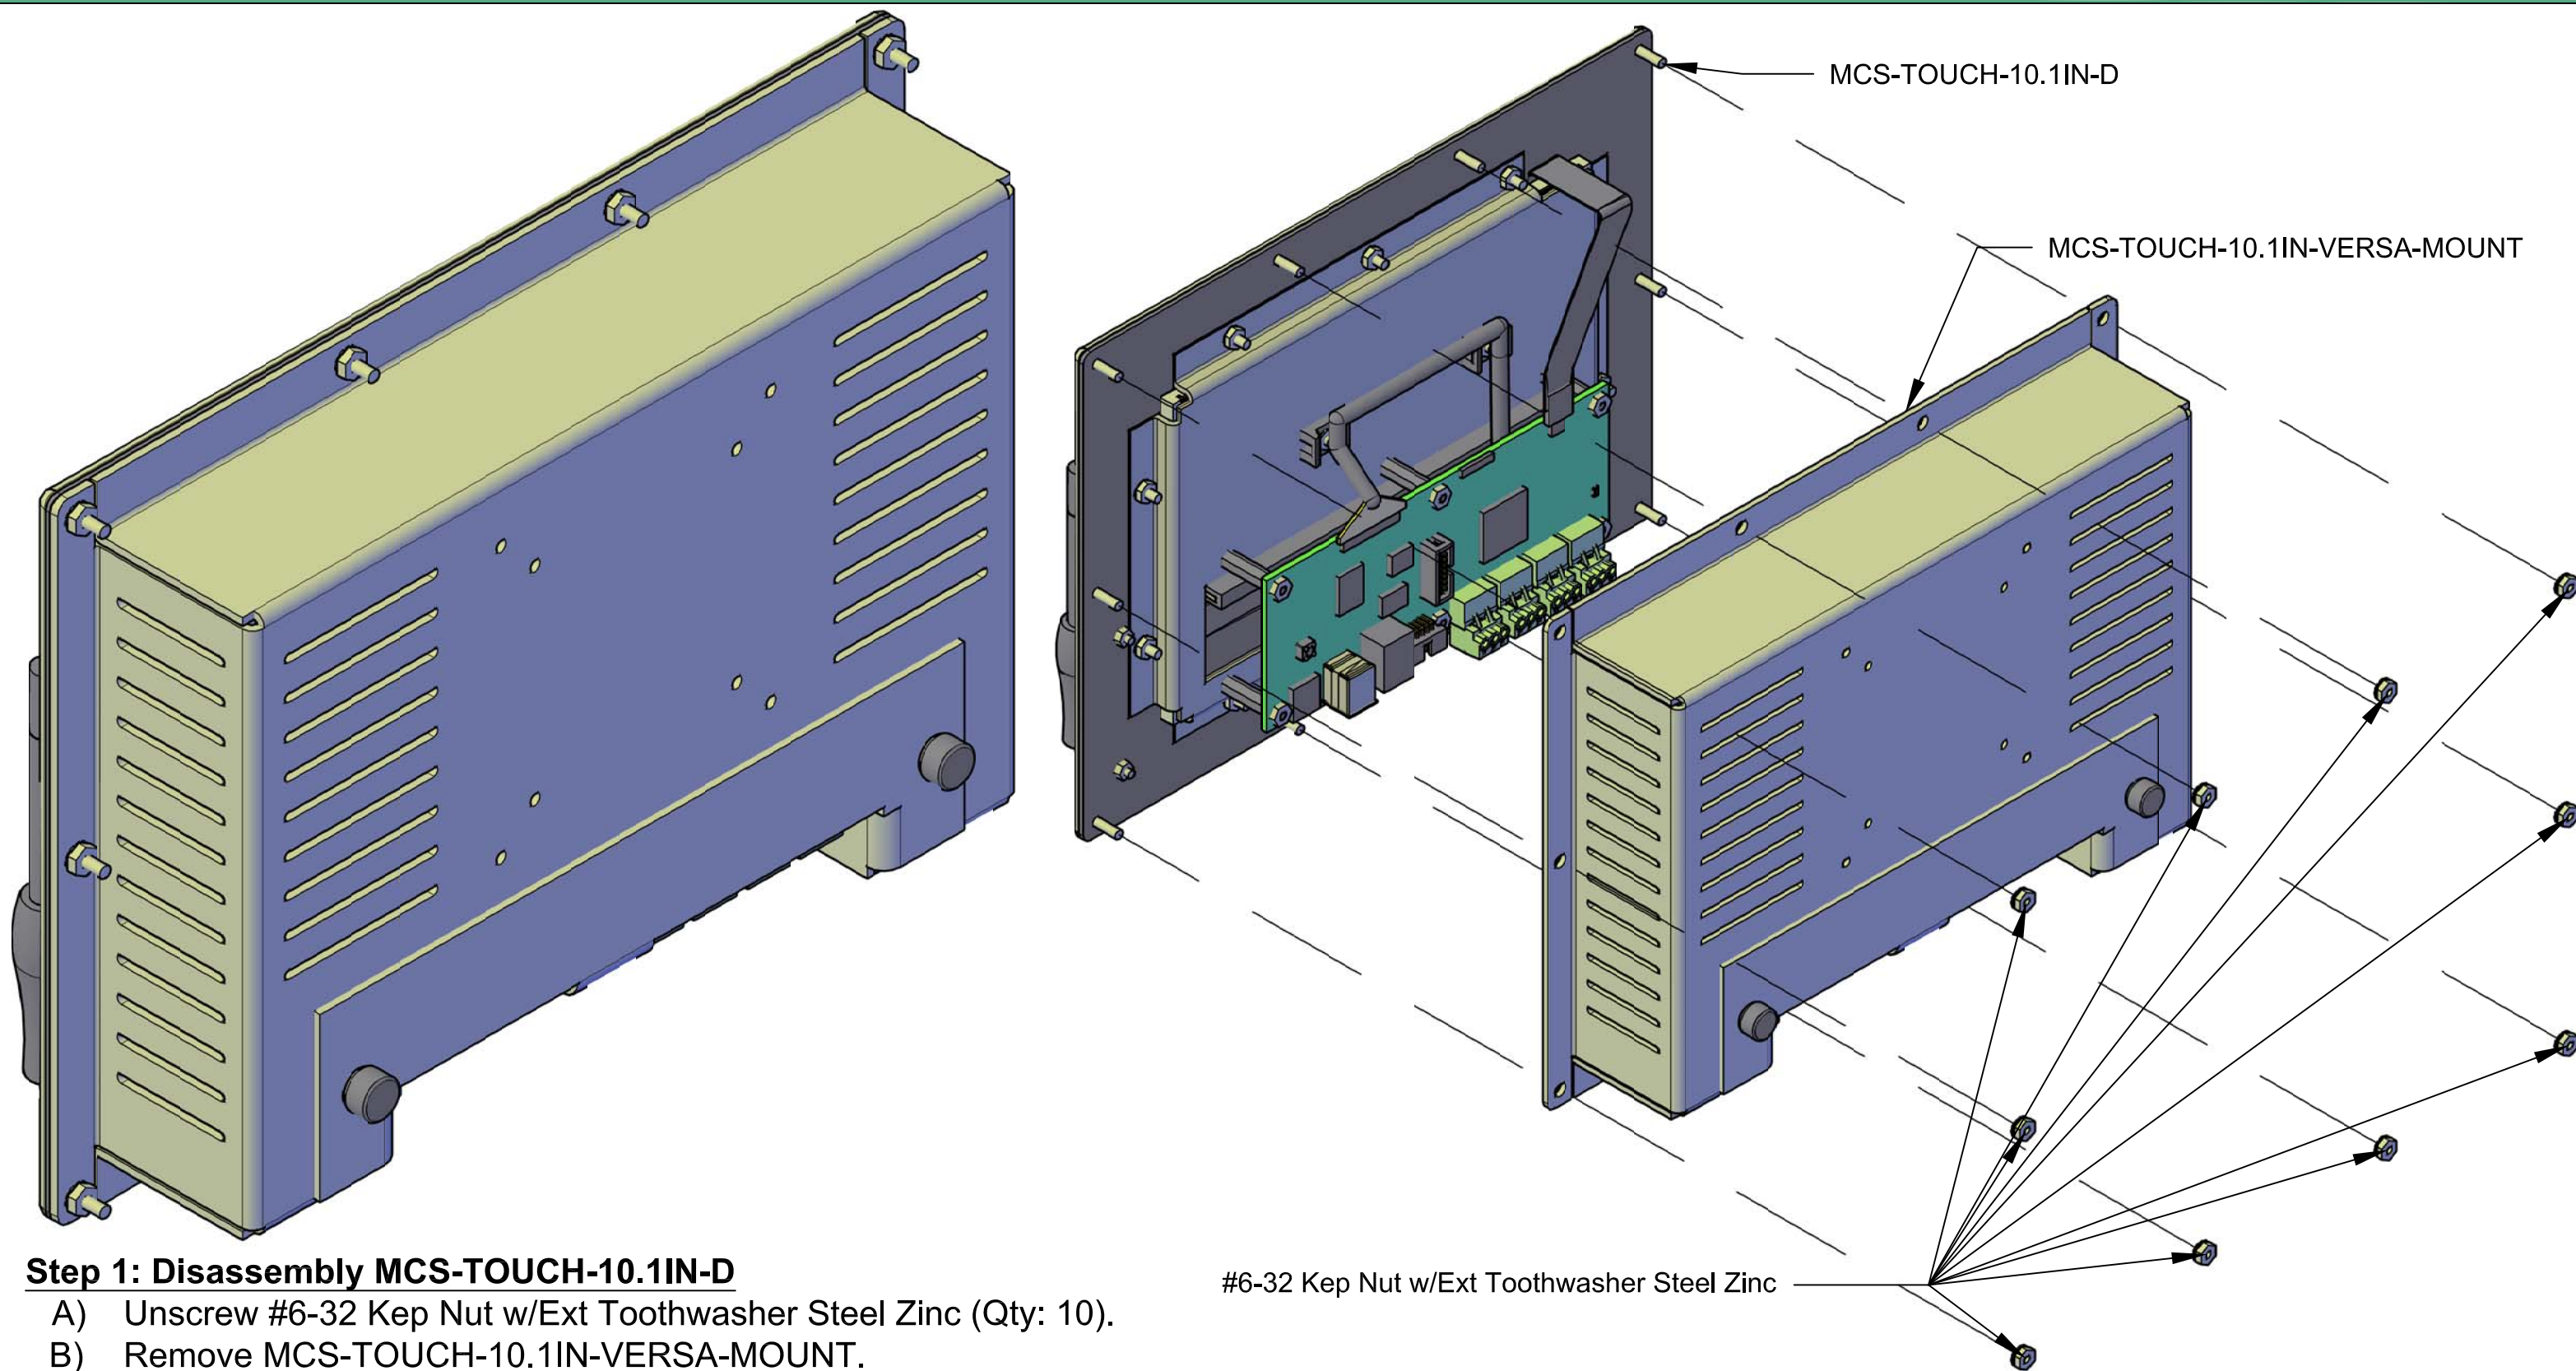

Step 1: Disassembly MCS-TOUCH-10.1IN-D

- Unscrew #6-32 Kep Nut w/Ext Toothwasher Steel Zinc (Qty: 10).
- Remove MCS-TOUCH-10.1IN-VERSA-MOUNT.

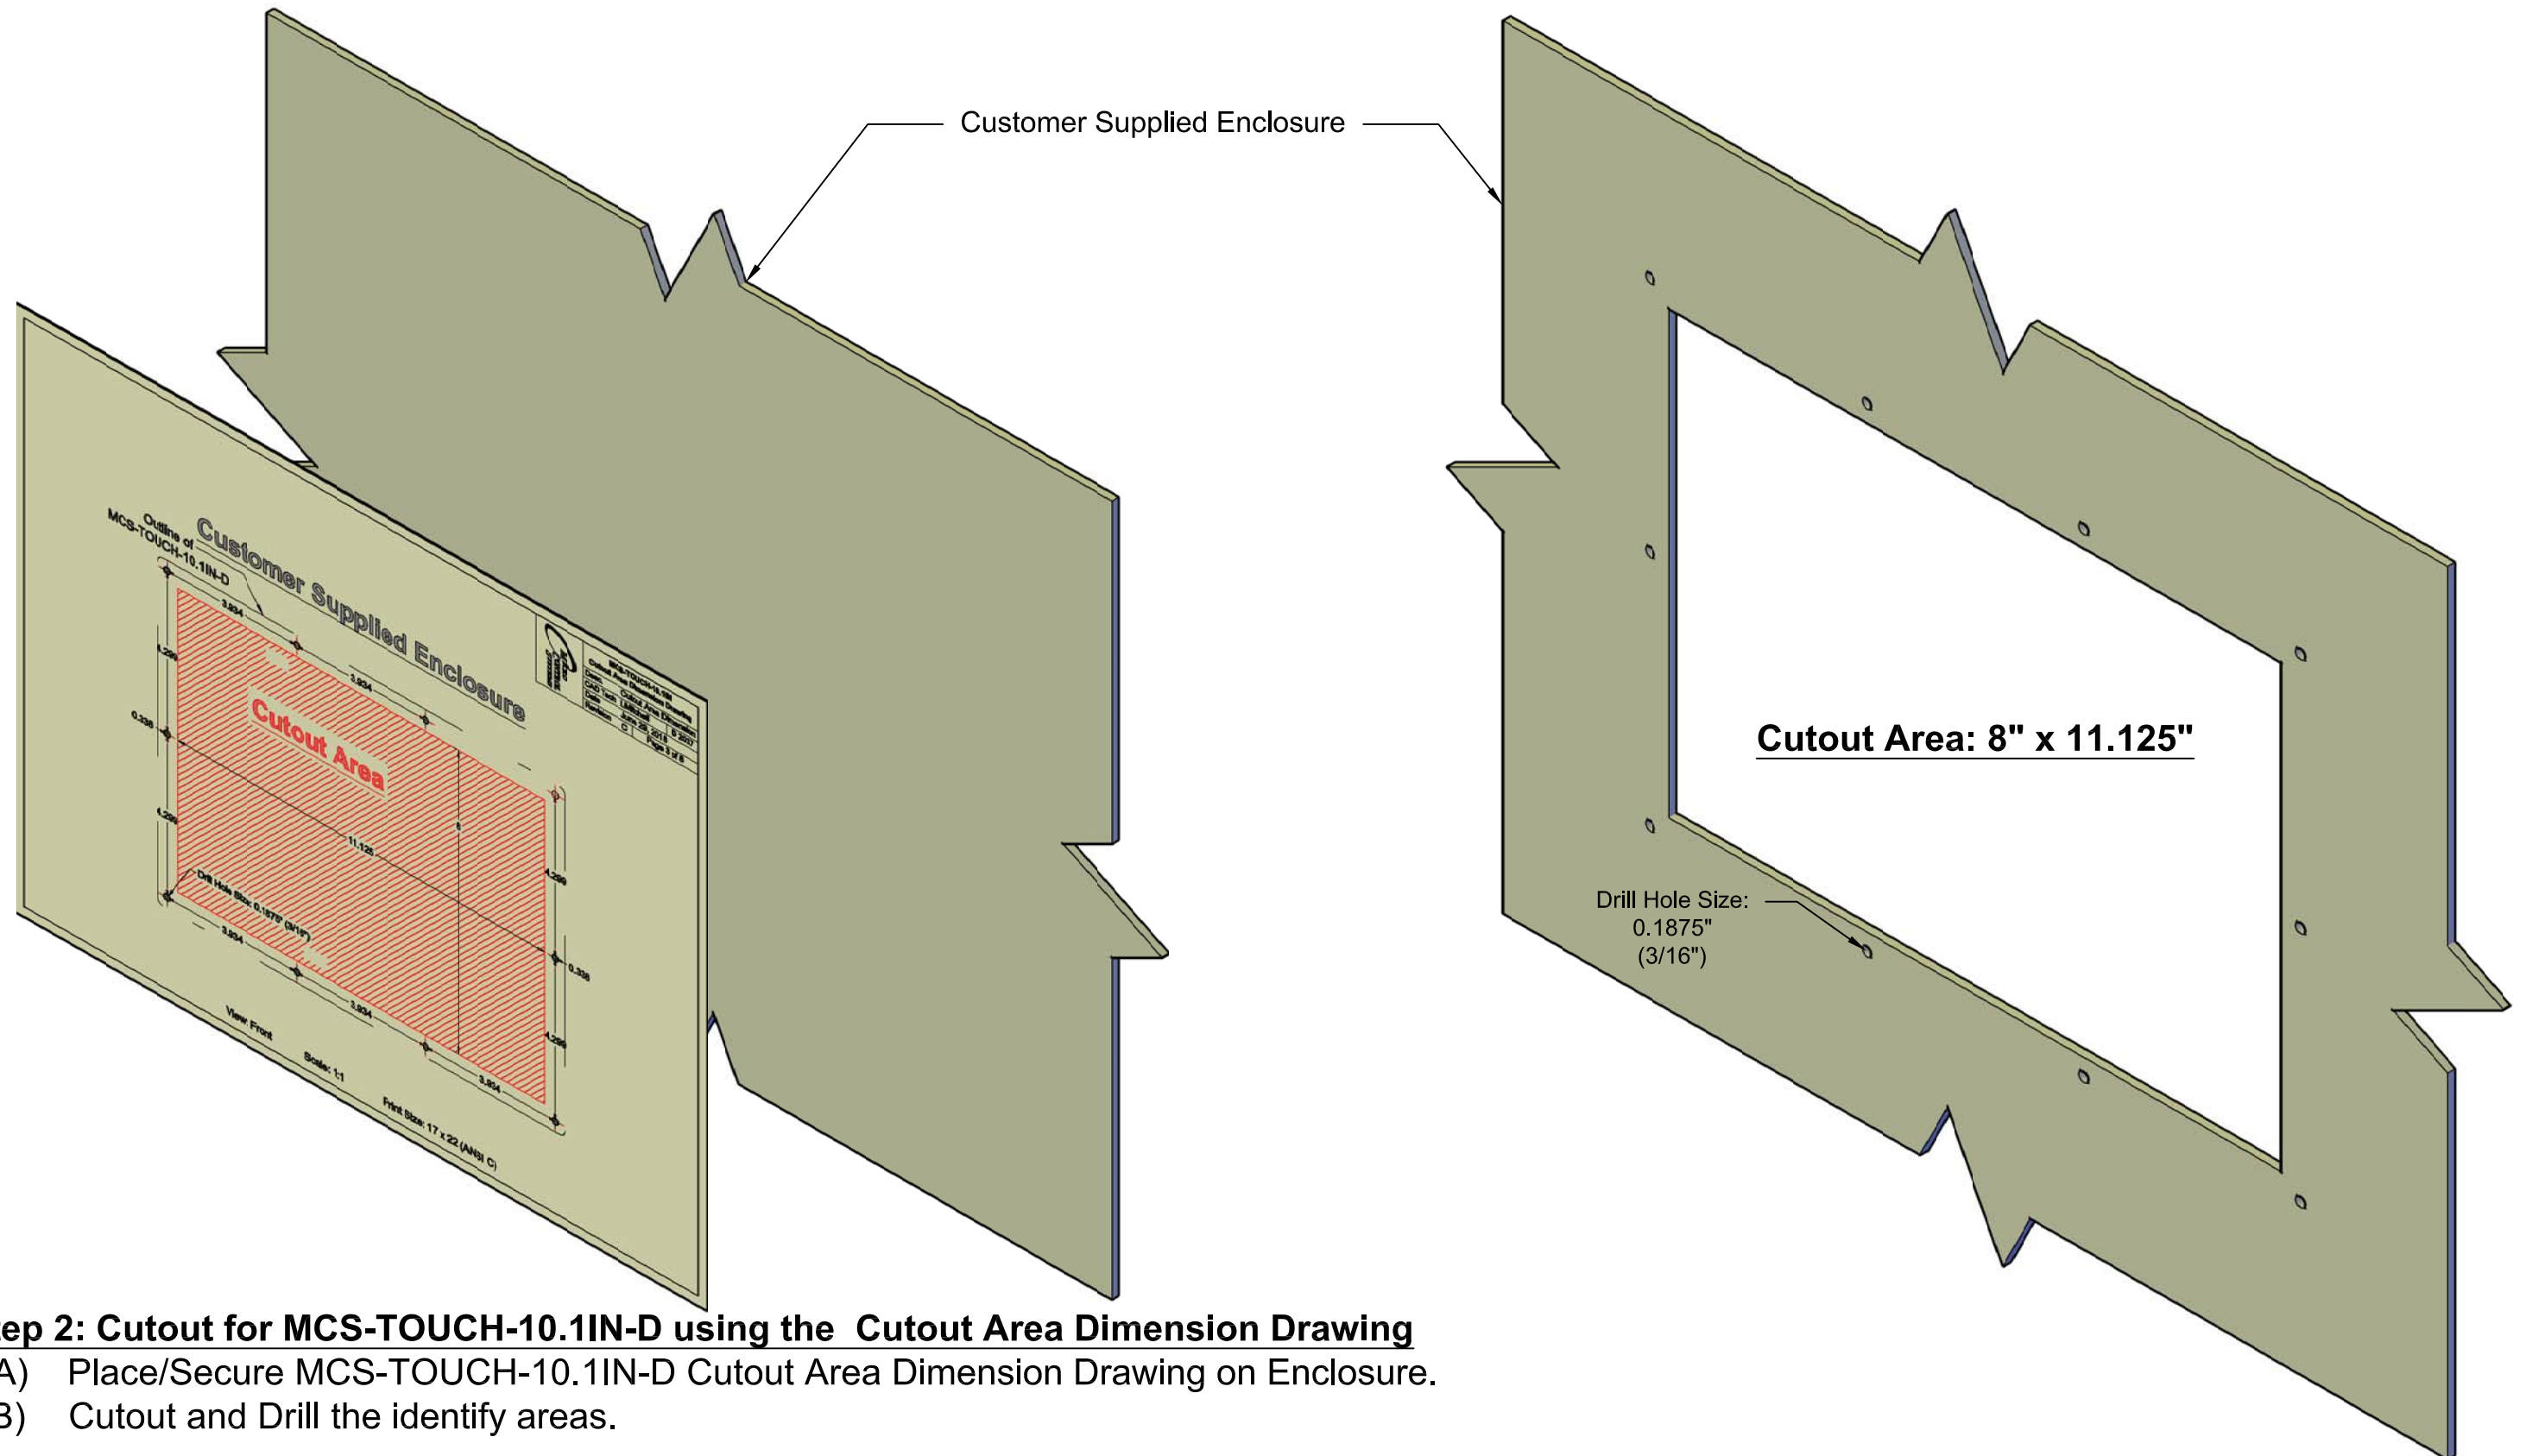


Step 2: Cutout for MCS-TOUCH-10.1IN-D using the Cutout Area Dimension Drawing

- A) Place/Secure MCS-TOUCH-10.1IN-D Cutout Area Dimension Drawing on Enclosure.
- B) Cutout and Drill the identify areas.


MCS-TOUCH-10.1IN-D

Mounting MCS-TOUCH-10.1IN-D

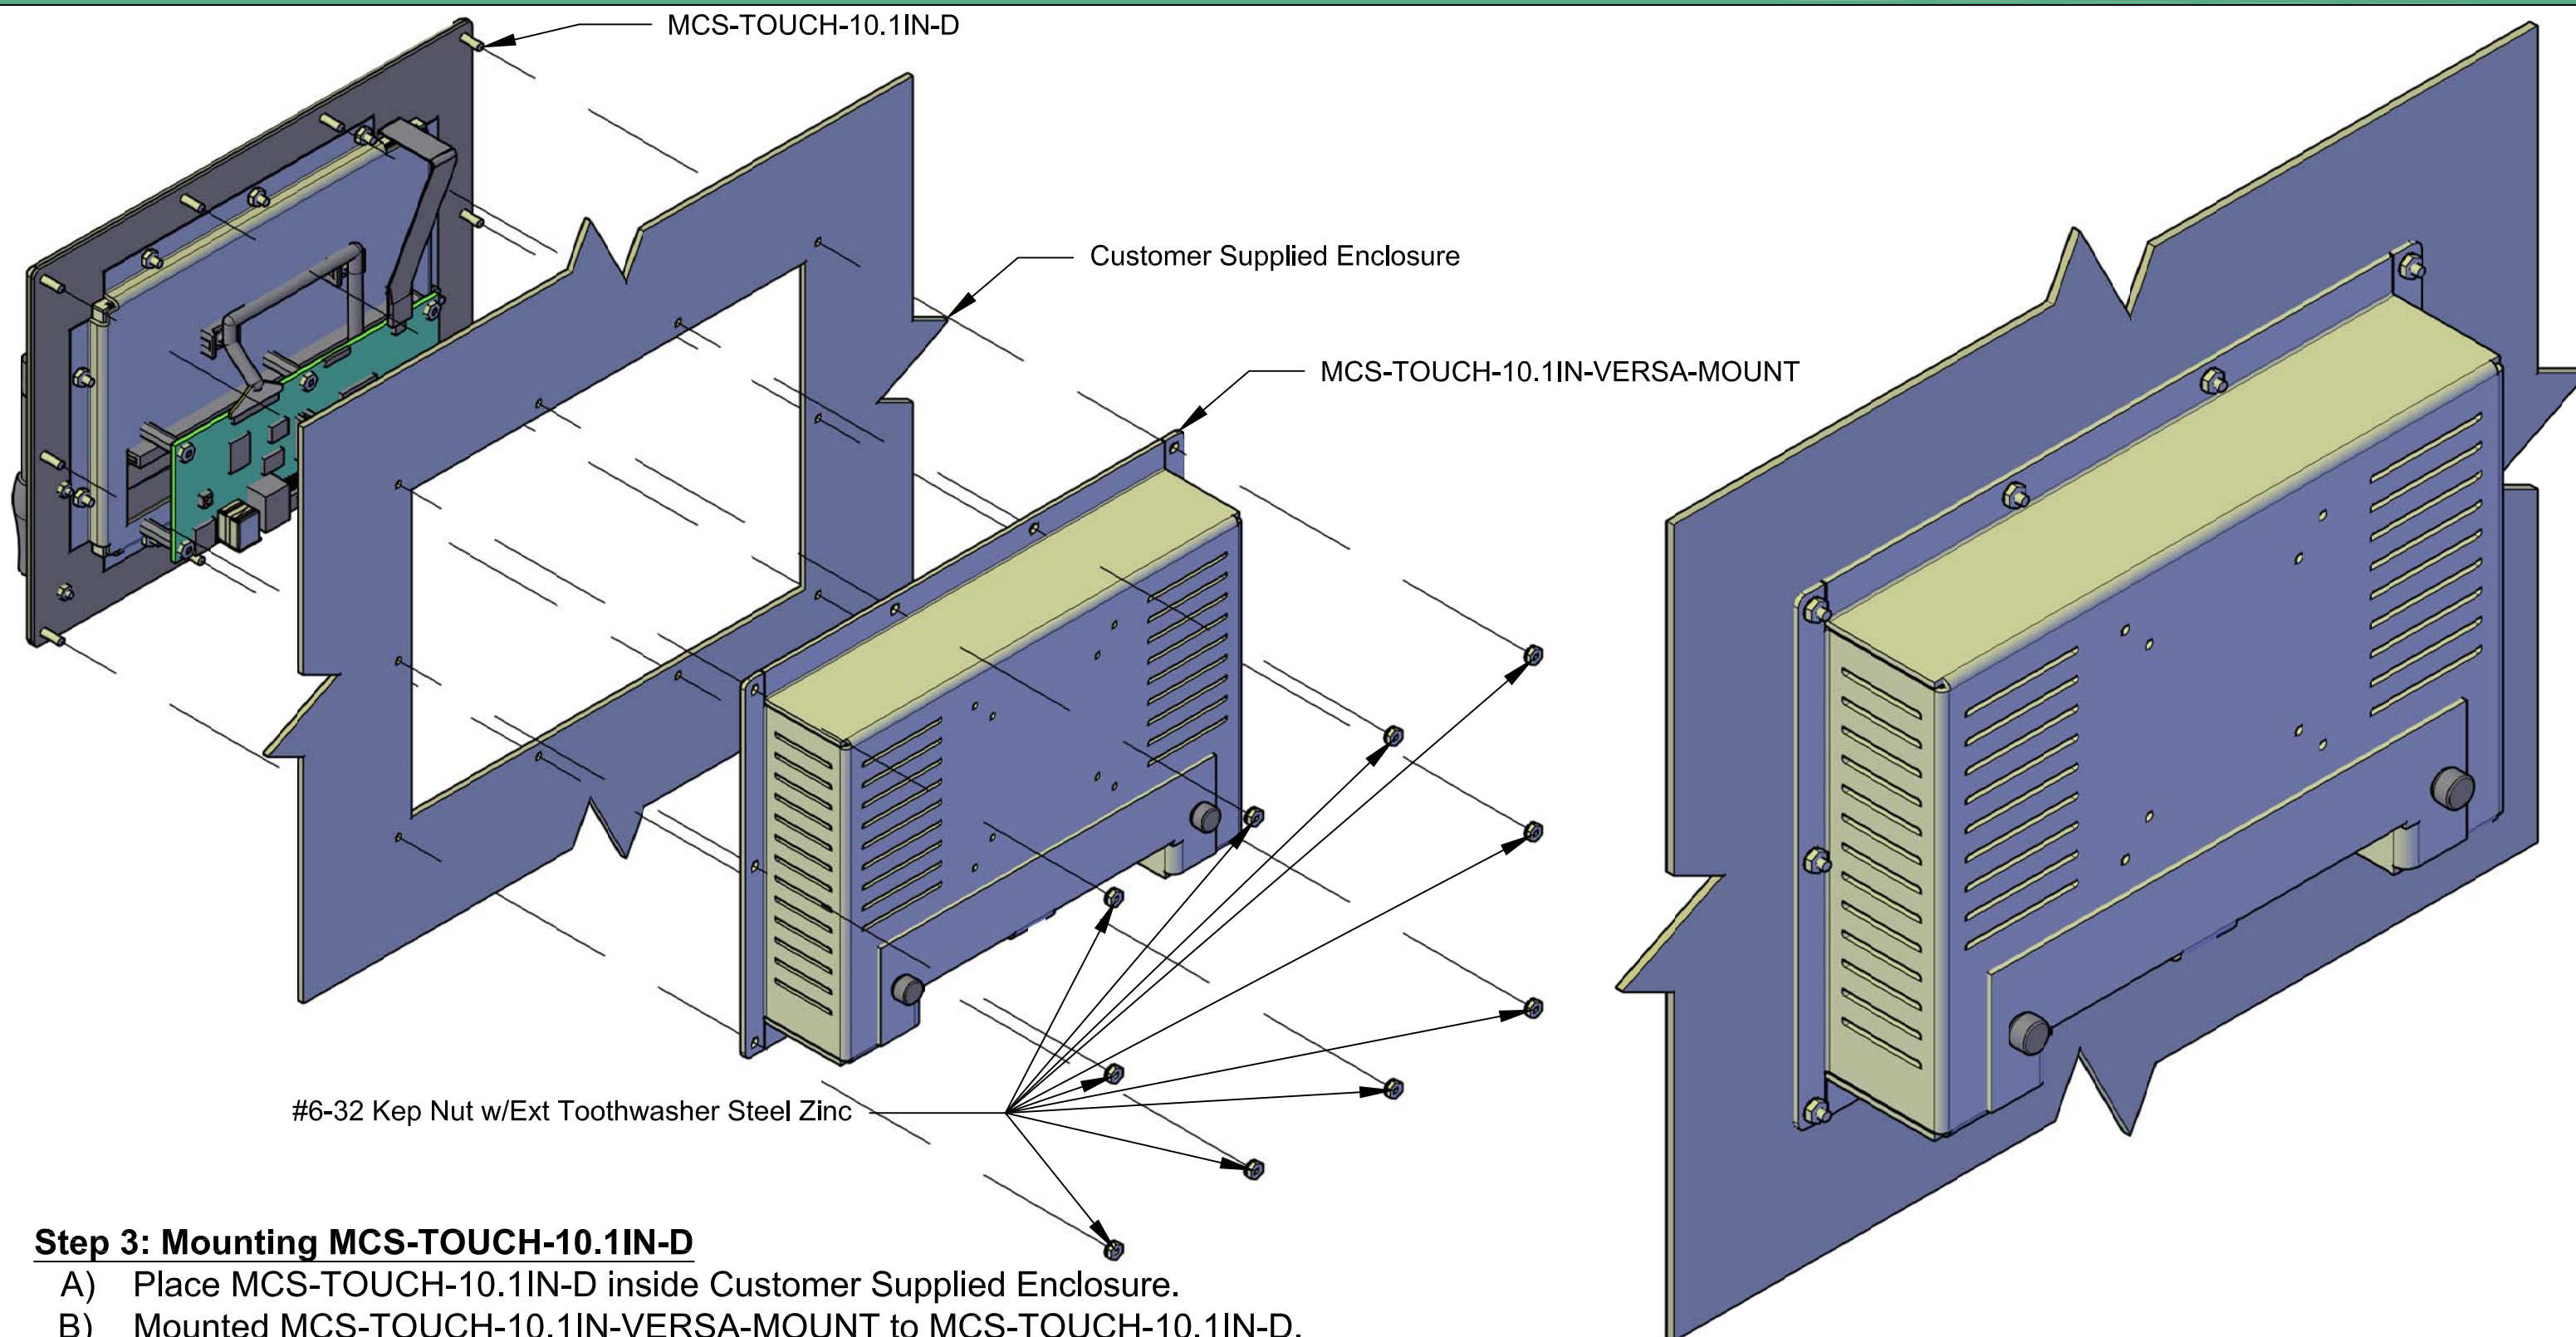


Step 3: Mounting MCS-TOUCH-10.1IN-D

- Place MCS-TOUCH-10.1IN-D inside Customer Supplied Enclosure.
- Mounted MCS-TOUCH-10.1IN-VERSA-MOUNT to MCS-TOUCH-10.1IN-D.
- Secure MCS-TOUCH-10.1IN-D and MCS-TOUCH-10.1IN-VERSA-MOUNT with #6-32 Kep Nut w/Ext Toothwasher Steel Zinc (Qty: 10).


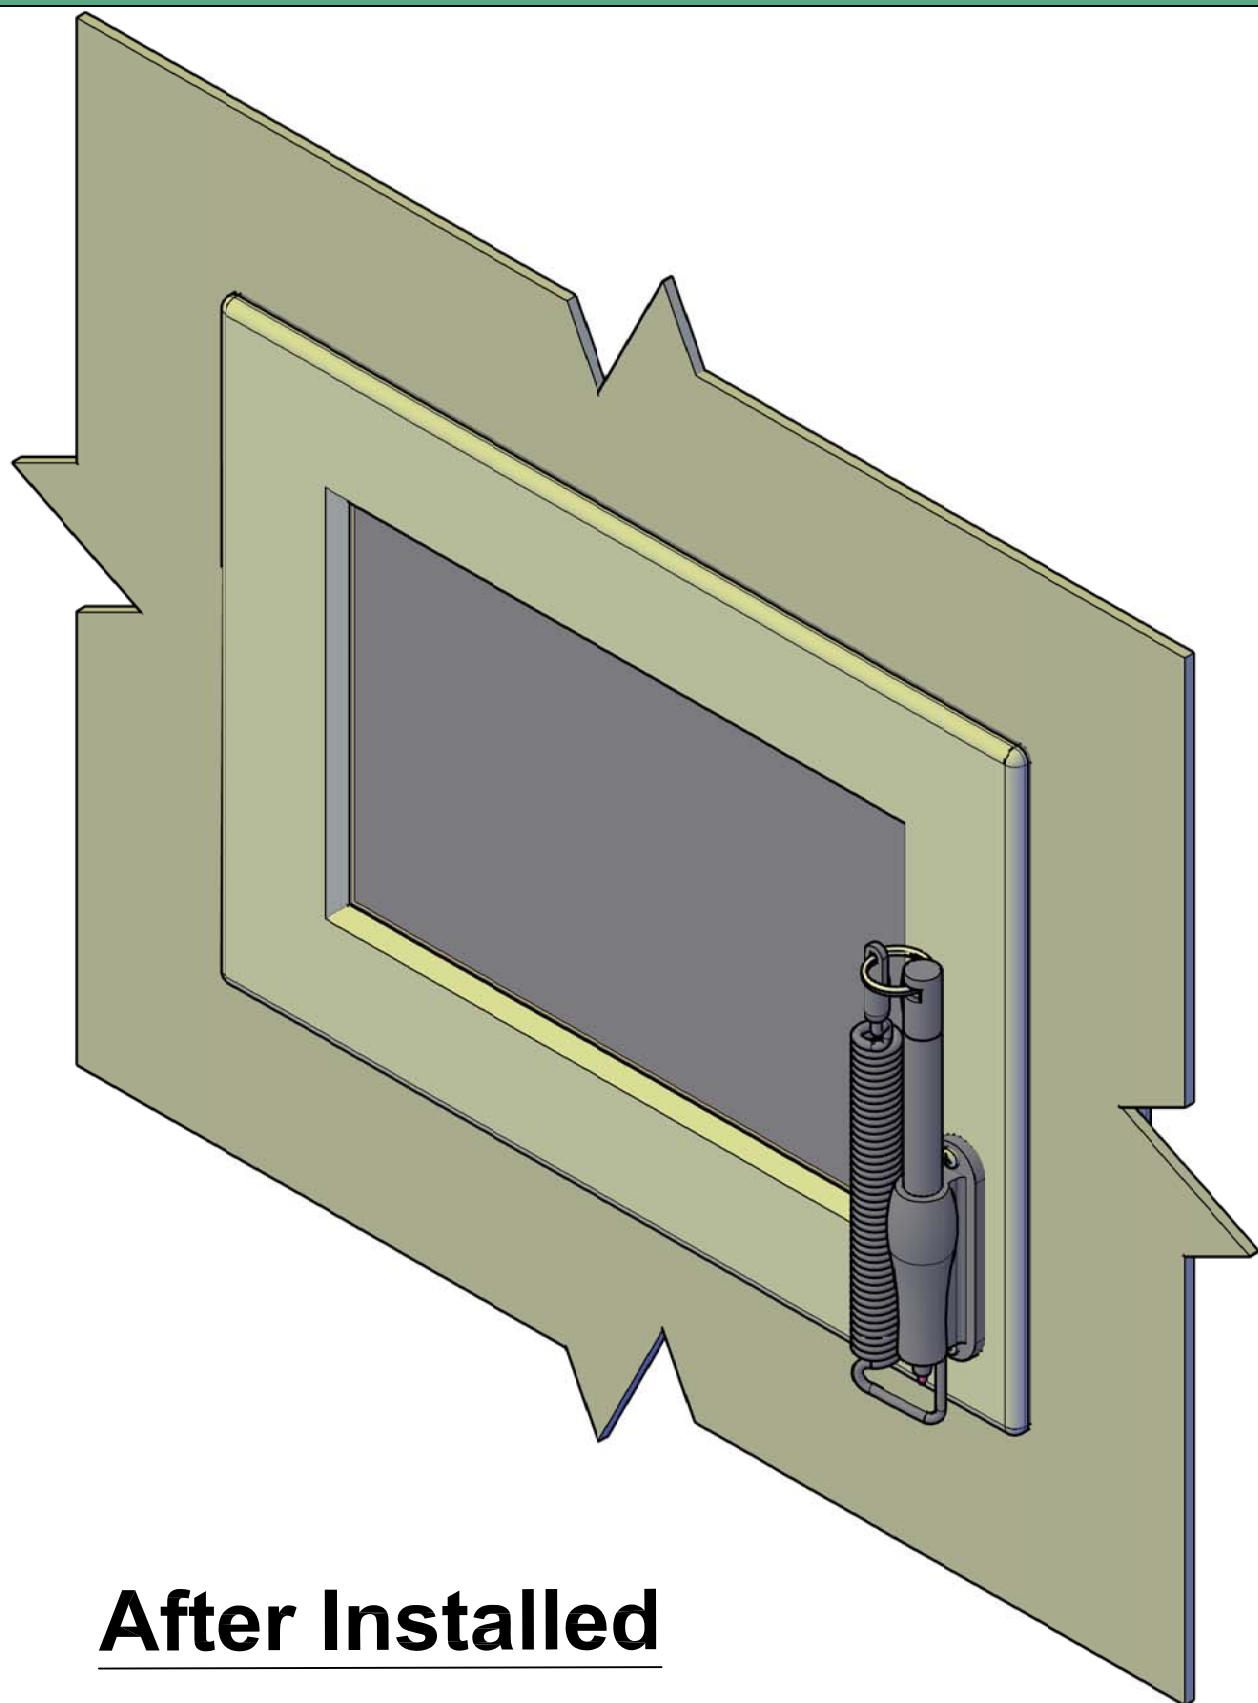


After Installed

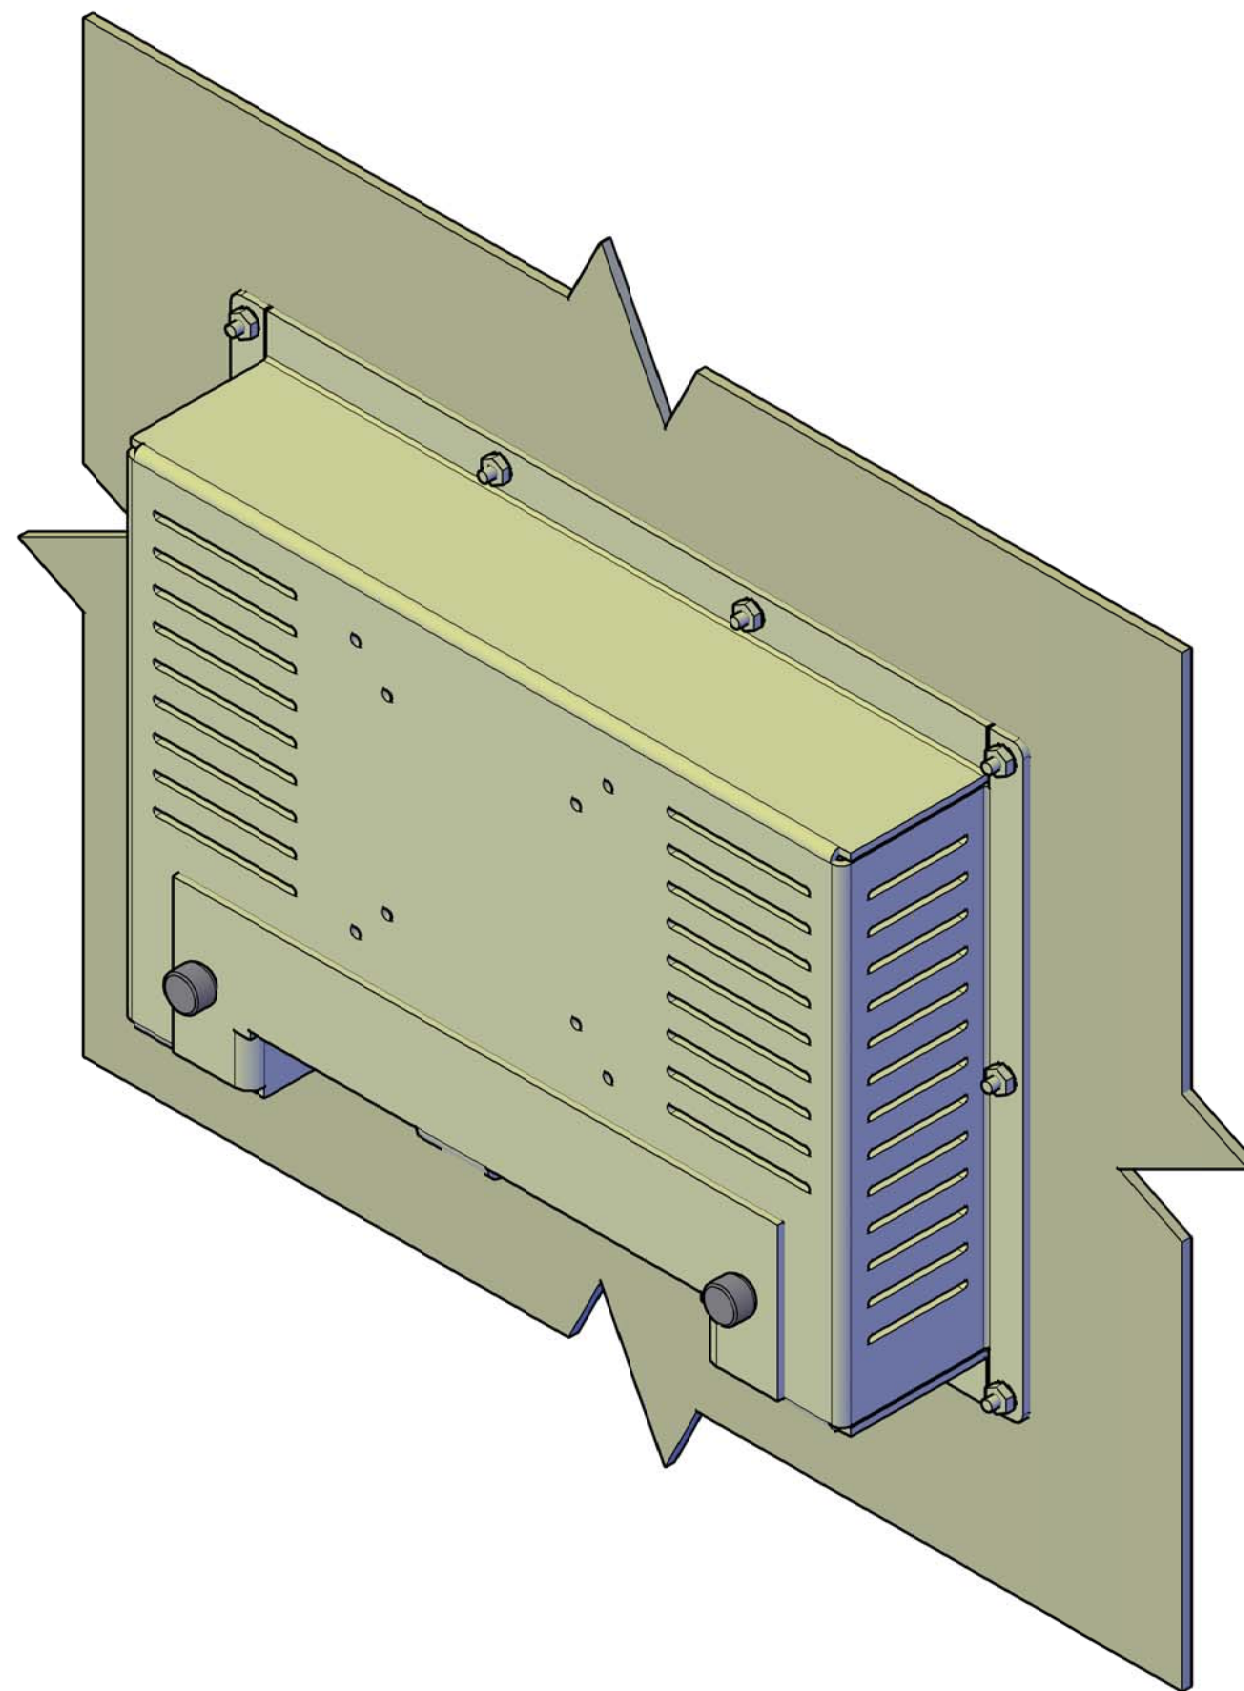


MCS-12V-90W Wiring Diagram



Required

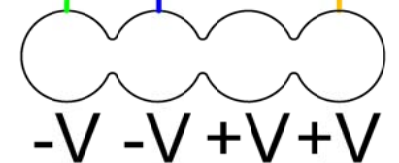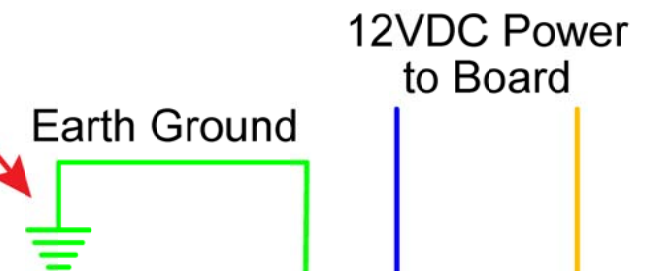

12V Power Supply

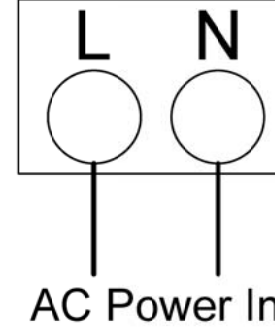


Back of MCS-TOUCH-10.1IN with Cover removed

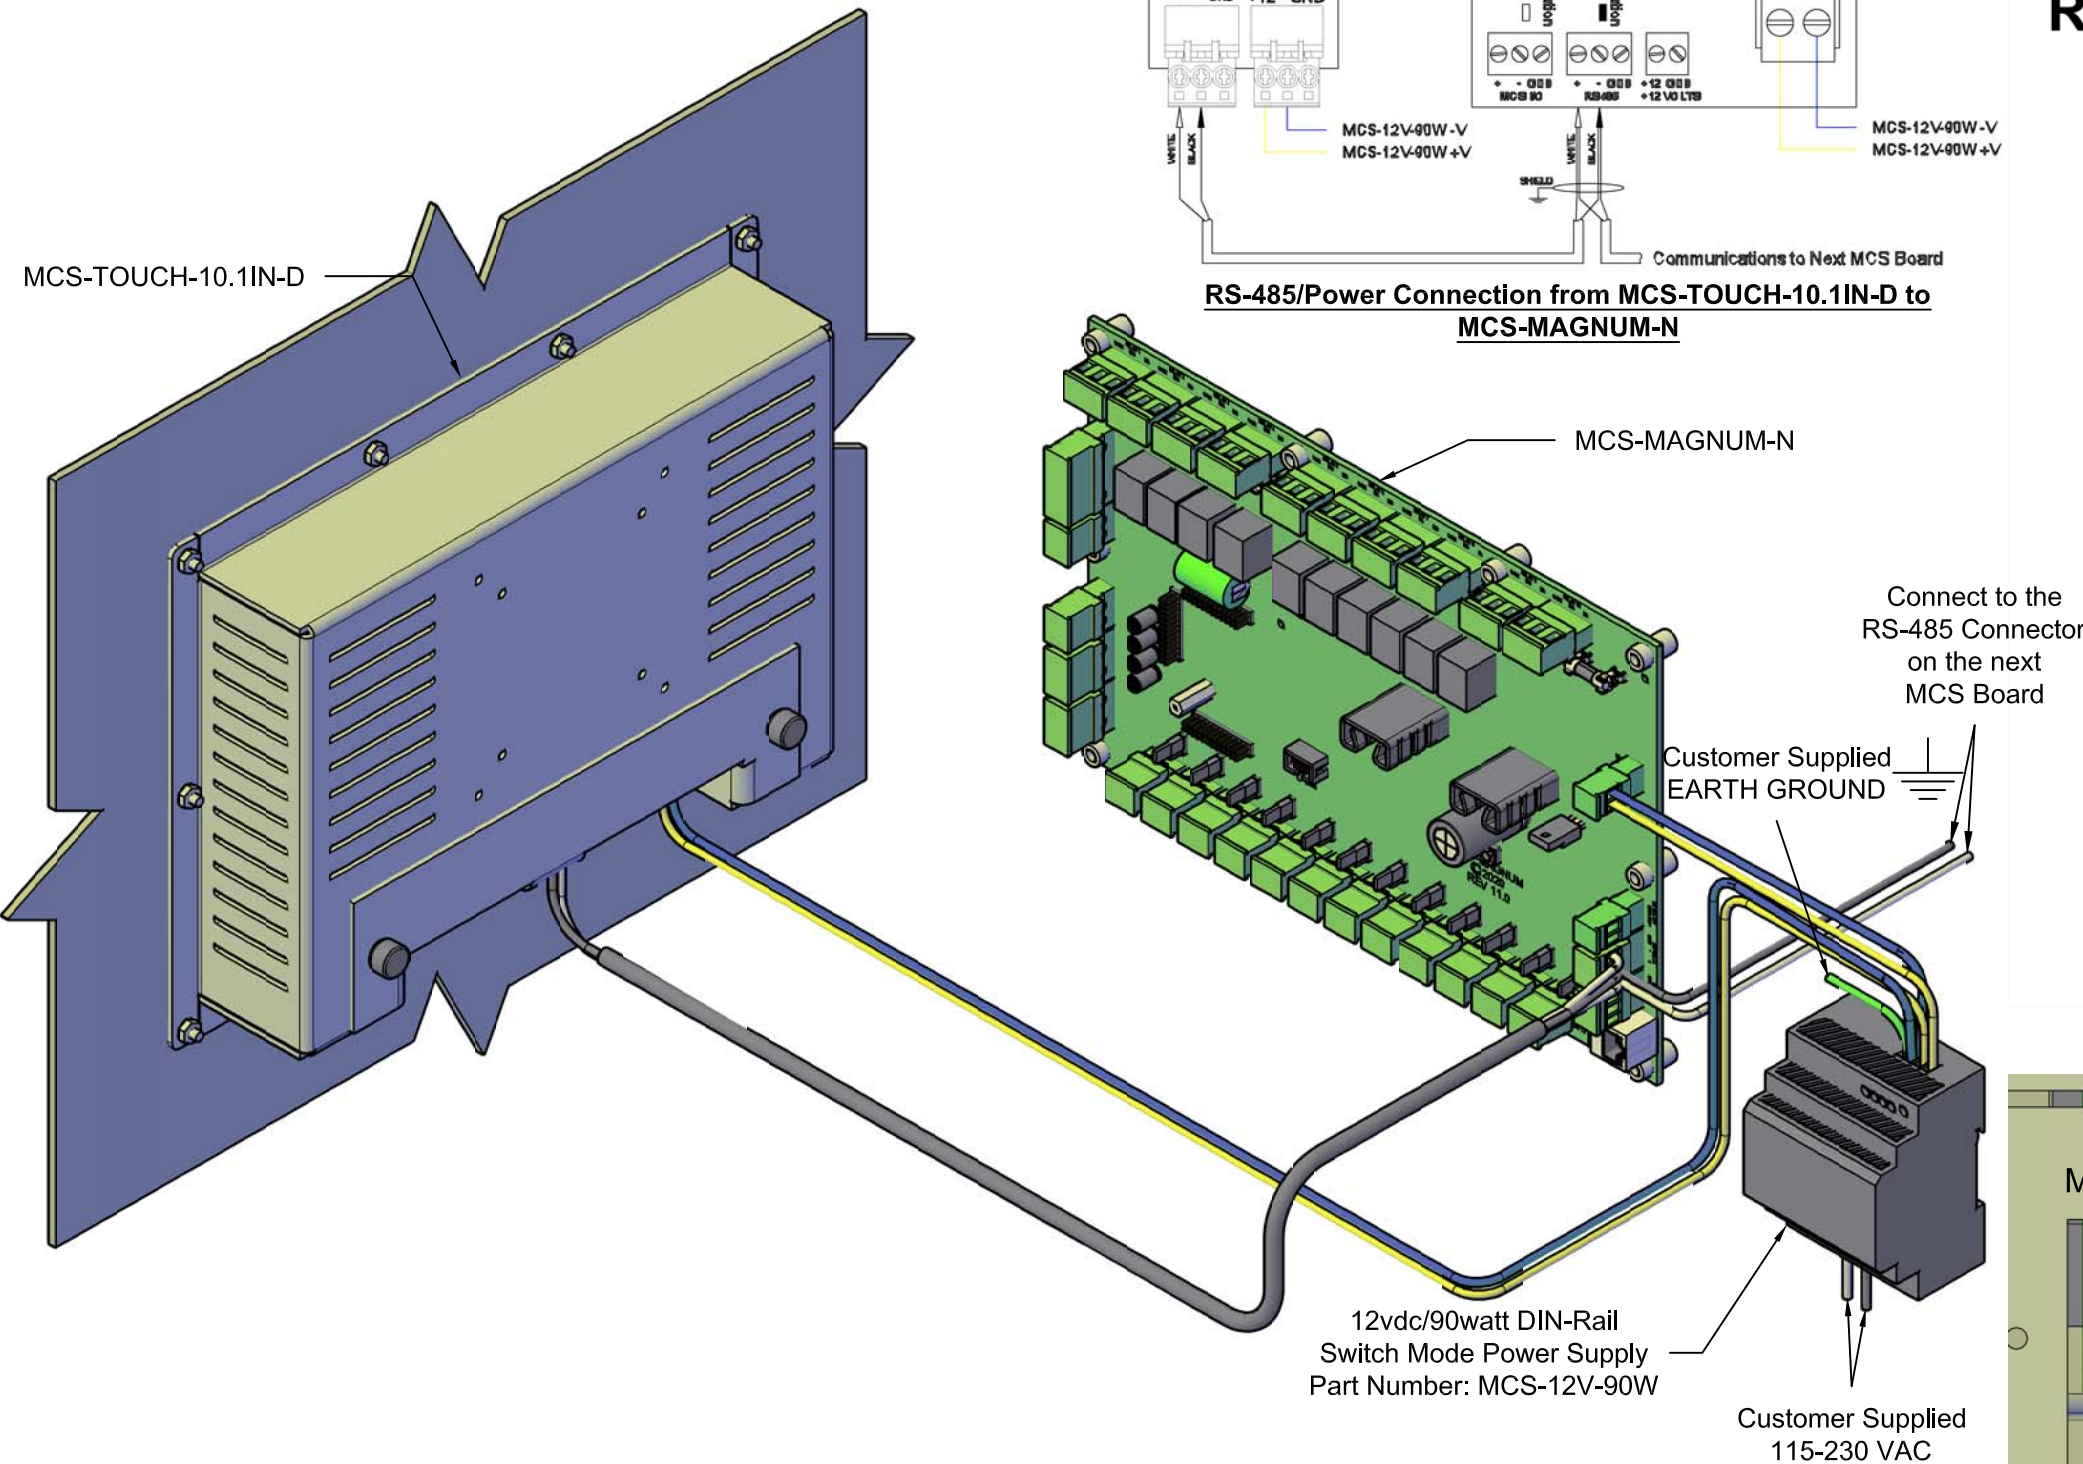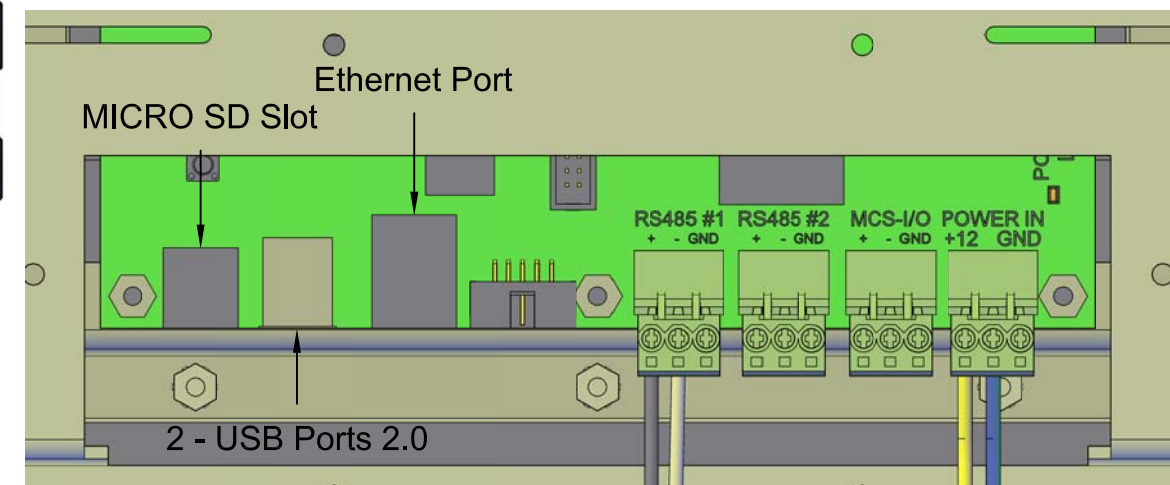


MCS-TOUCH-10.1IN-D

Ethernet-Switch Wiring Drawing

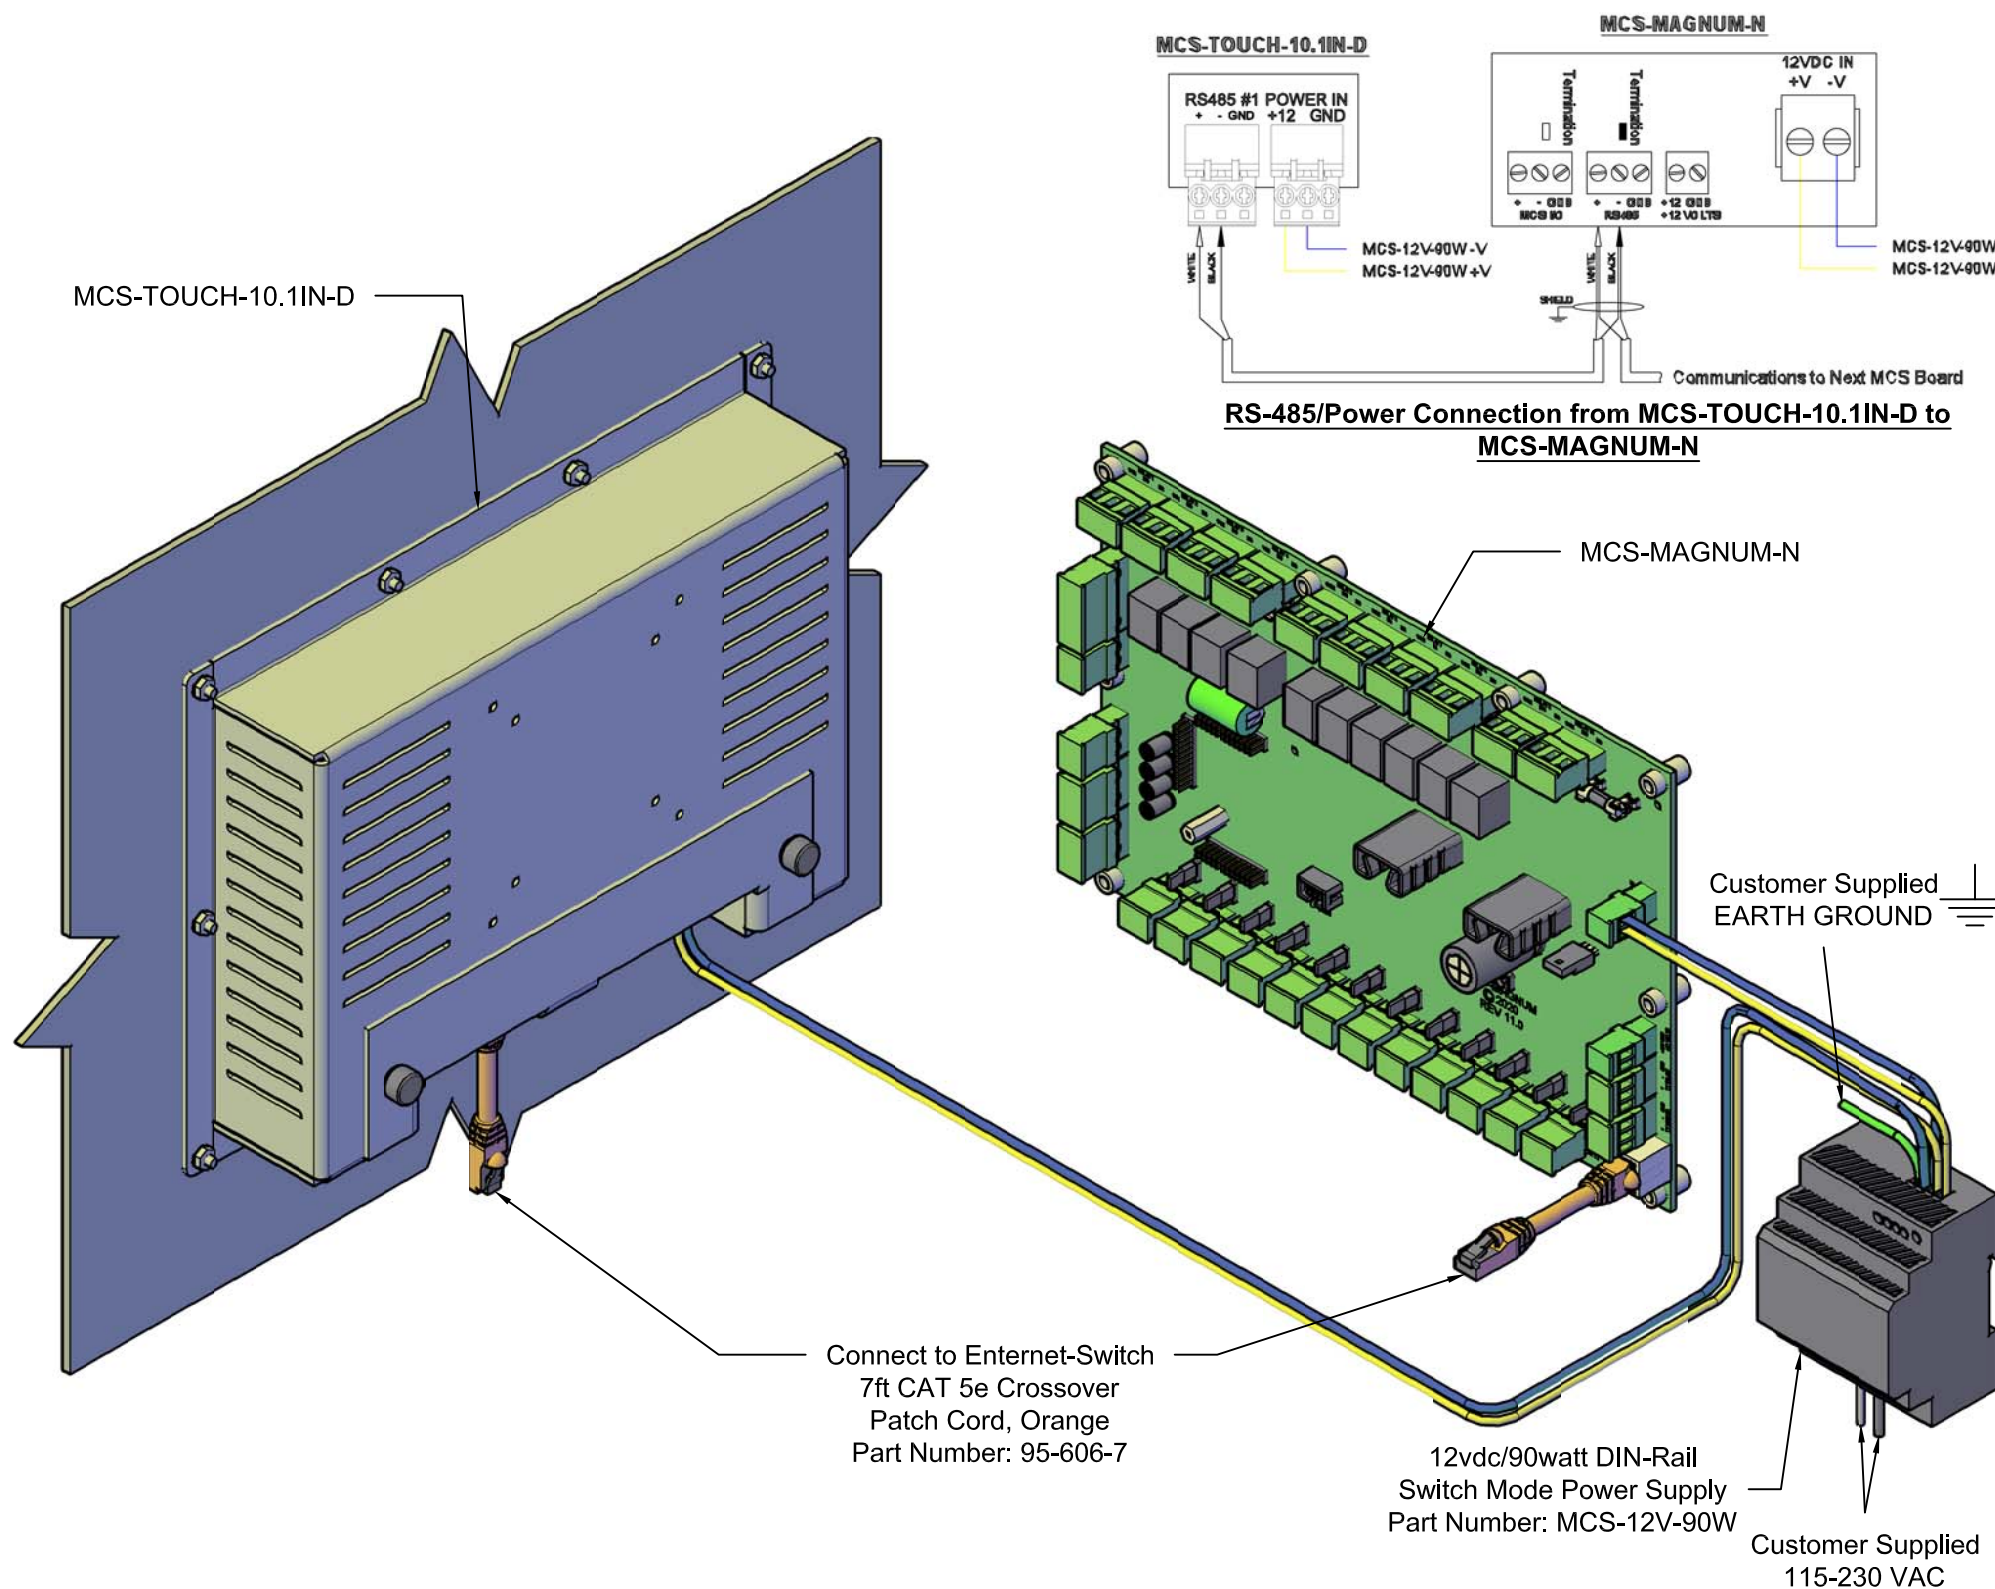

MCS-12V-90W Wiring Diagram

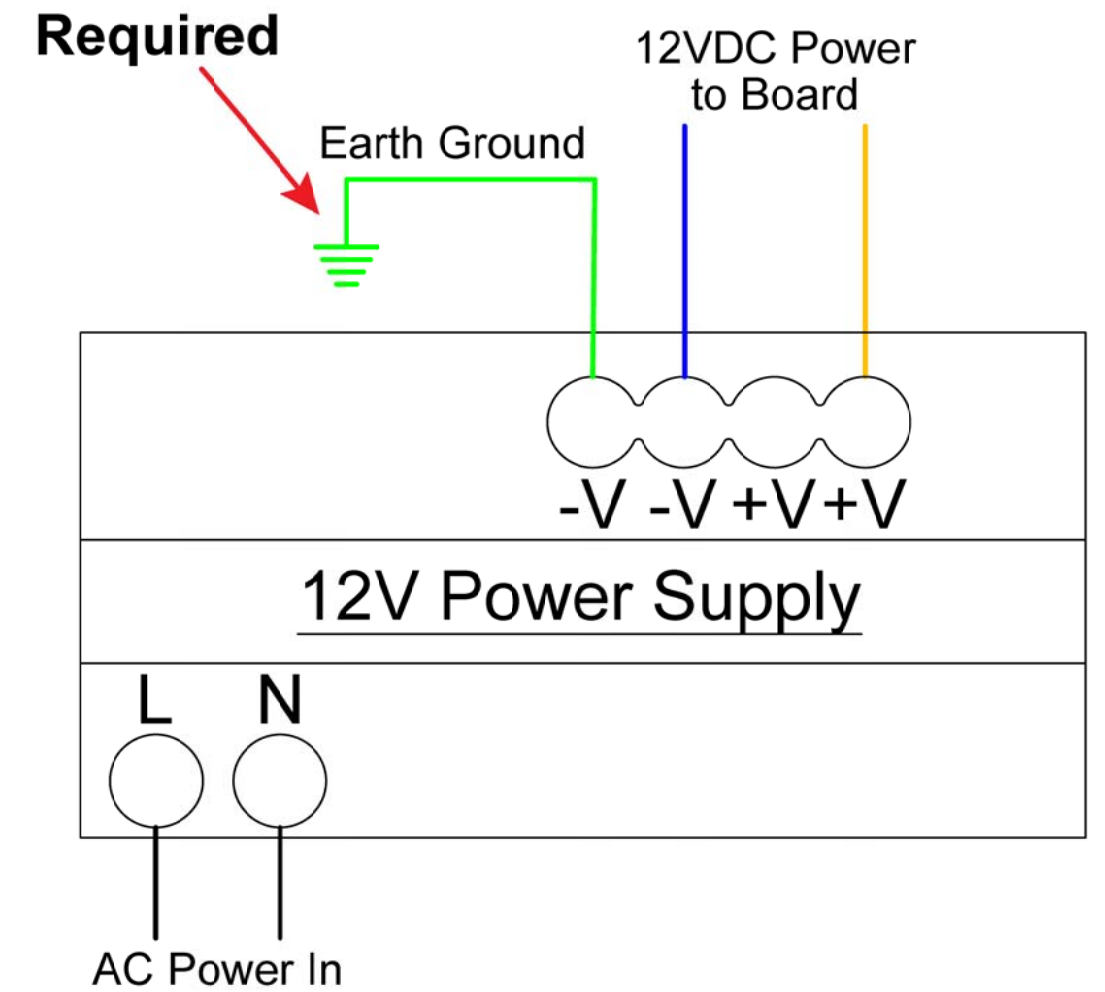

Back of MCS-TOUCH-10.1IN with Cover removed

