





MCS-TOUCH-15.4 CUSTOMER INSTALLATION

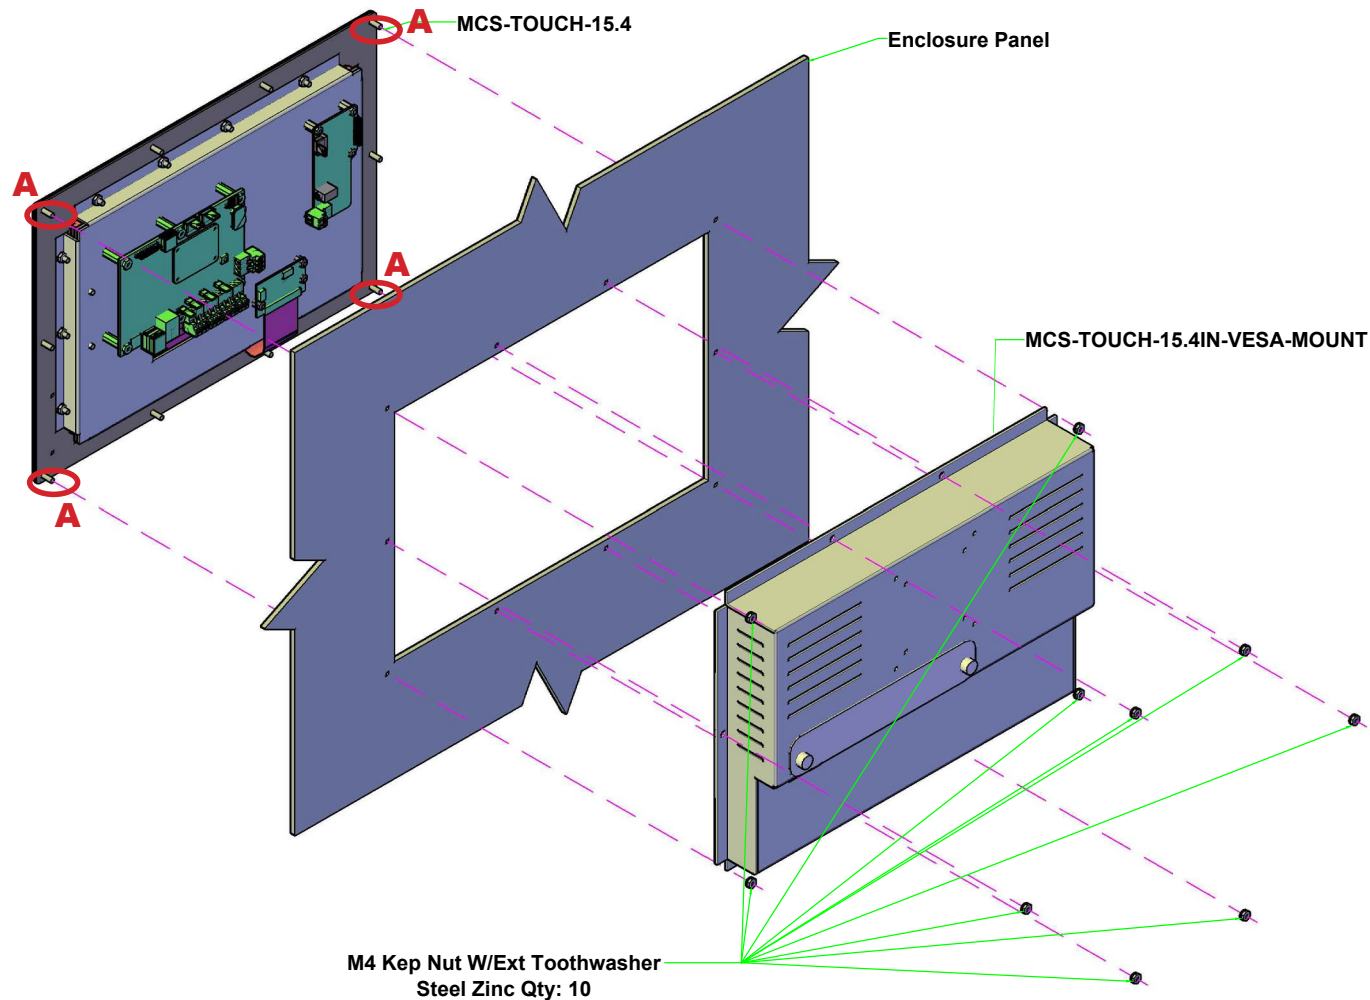

1. Remove all nuts from back of the touchscreen (10).
2. Separate the face of the touchscreen from the Vesa Mount back.
3. **Lay the template (printed sheet supplied) on your enclosure**, mark area for the cutout, 15.75 x 10.875 (40.05 x 27.6225cm).
4. Mark the 10 holes to drill.
5. Drill bit size - 3/16in (5mm).
6. Cut out the hole for the touchscreen.
7. Place the Touchscreen Face Plate through the cutout and secure the **“4” corner ‘A’ nuts** to the enclosure.
8. Place the Vesa-Mount back onto the face plate studs, secure the remaining 8 nuts, making sure you do not over tighten the nuts. Tightening each nut around the frame, so the gasket is not pinched. **Torque value 1 lbf.in**

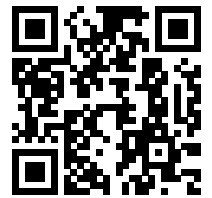


Click or scan with phone
for information to mounting



MCS-TOUCH-10.1 / MCS-TOUCH-15.4 Customer Installation Wiring

Wiring Diagram

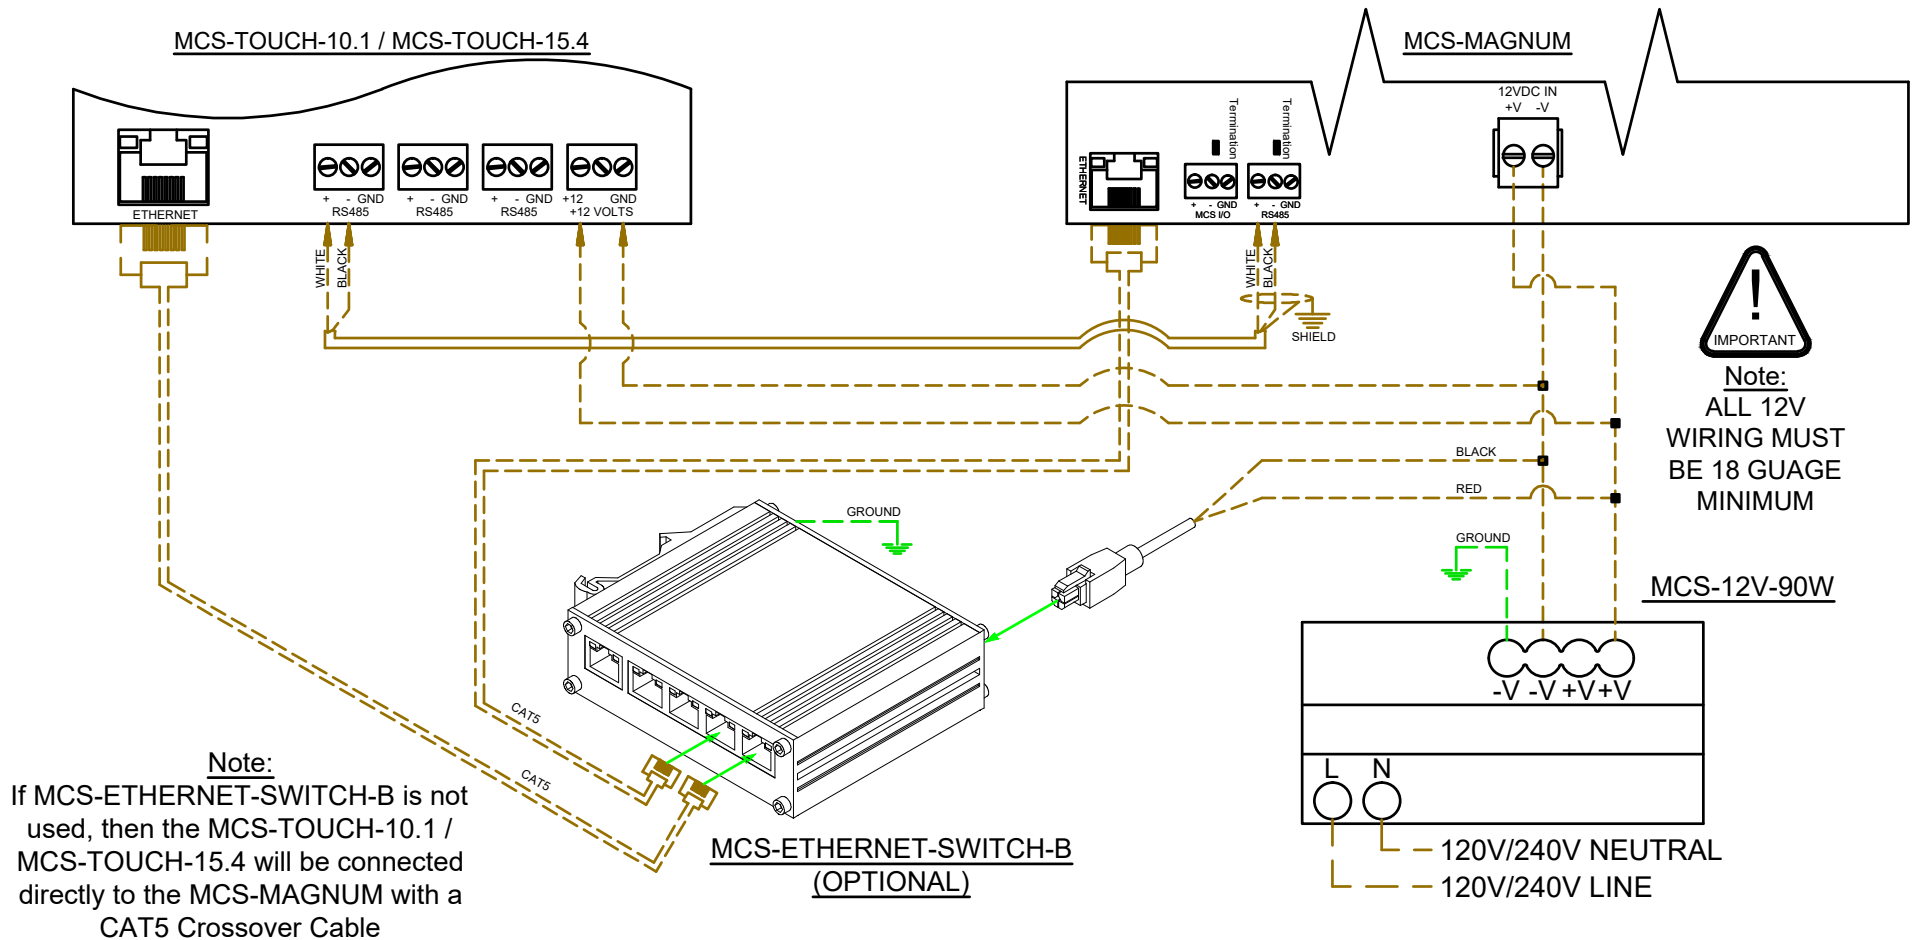

5580 Enterprise Pkwy, Fort Myers, FL 33905 USA
Office: 239-694-0089 - Fax: 239-694-0031
www.mcscontrols.com - support@mcscontrols.com