

MCS Total Solutions for all your HVAC/R Control Needs



MCS-Nitromag Upgrade Brochure YK SERIES CHILLERS

Click for Brochure Upgrades

This brochure describes a standard upgrade package for the YK® Chiller.



YORK YK chiller require an adapter for their services valves for MCS-PRESSURE TRANSDUCERS to fit on.

Check with MCS-SALES for the part needed prior to installation.

Each control upgrade installation is unique. It may be necessary to add additional options to the standard upgrade as described in this brochure.

Fill out the brief questionnaire in the back of this brochure and forward to your sales representative for an estimate.



Revision - 2025-08-25 Subject to change without prior notice

Example MCS-NitroMag Upgrade Photos

MCS-NitriMag-Centrifugal

Specifications

Certification...... UL508A - E511647 **NEMA Rating – Type 1 Control Panel**

Enclosure is intended for indoor use primarily to provide a degree of protection against contact with the enclosed equipment and is not protected from liquids.

Industrial Control Panel

Dimensions of control panel.. 27"w x 39.75"h x 8.0"d Mounting Holes..... Mounts with four pre-drilled 15/32" holes

Rated Voltage (Standard)..... 120VAC or 230VAC Phase / Frequency 1 Phase / 60Hz

Full Load Current(approx) 40A at 120VAC or 20A at 240VAC

Short Circuit Current Rating . 10kA

Temp. Range for Control Panel & Touch Screen

Operating Temperature...... -4°F to 158°F (-20°C to 70°C) Operating Humidity......0-95% Non-Condensing Storage Temperature......-4°F to 158°F (-20°C to 70°C)

MCS-MAGNUM Specification

Microprocessor......Zilog eZ80 Acclaim! @ 50mhz Sensor Inputs (SI)...... 12 inputs 0-5vdc (10-bit A/D) Digital Inputs...... 4 inputs 0 or 5vdc only Relay Outputs (RO)............... 10 outputs 6.3amps @ 230vac Analog Outputs (AÓ) 4 outputs 0-10vdc Printed Circuit Board Six layer with separate power and ground planes Input Power (Standard) 12 vdc Regulated Power Supply Minimum (Brown in)9.44 vdc Amp Draw (Loaded)857.0 mA RS-485 Comm Port 1 @ 19,200 baud

Real Time Clock Battery backup

Power Detection Automatic power fail reset

MCS-SI-BASE/EXT Expansion Boards

Sensor Inputs (SI)................. 48 inputs 0-5vdc (2 Base/1Ext) Analog Outputs (ÁO) 12 outputs 0-10vdc

MCS-I/O Comm Port 1 @ 38,400 baud

MCS-RO-BASE/EXT Expansion Boards

Relay Outputs (RO).....20 outputs 6.3amps @ 230vac MCS-I/O Comm Port 1 @ 38,400 baud

MCS-Touch-15.4 - Capacitive Touchscreen

Dimensions......17"L x 12.11"W x 3.228"H LCD Screen......15.4" (16:10 Diagonal) 16.2 Million Colors

> 1280x800 Resolution Touchscreen Soft Touch Capacitive Stylus pen

Gasket......BISCO HT-820-Firm Cellular Silicone Touchscreen Surface.....UV Degradation Protection

Power Supply - Specification

12vdc power supply.....85vac ~ 264vac AC frequency range......47 ~ 63Hz Output rated current......7.5A Output rated power.....90W

24vdc power supply......85vac ~ 264vac AC frequency range.....47 ~ 63Hz Output rated current......4A Output rated power.....96W








MCS-NitroMag-CENTRIFUGAL

INDUSTRIAL CONTROL PANEL

NEMA Rating Type 2- IP30 Rating

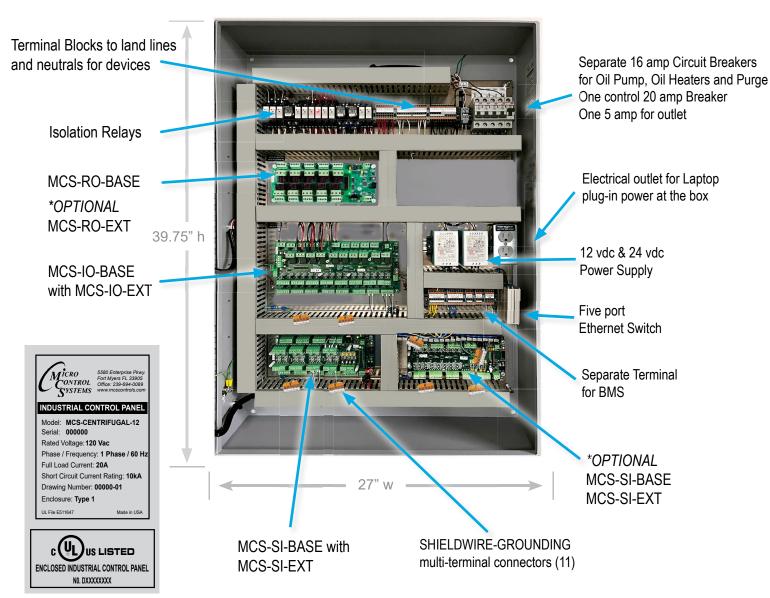

^{*} Optional MCS Expansion and Extension boards shown

UL 508A Certified Industrial Control Panel


Benefits of selecting an Industrial Control Panel that carries the UL 508A certification include:

UL 508A certification provides the inspection authority and your customer evidence that the control panel complies with nationally recognized safety standards. These standards ensure public safety and provide assurances that the electrical control panel is compliant with national and local electrical codes.

For a control panel to carry the UL 508A Listing Mark, the panel must contain only UL recognized and listed components. The UL Mark on a component means that UL has evaluated and tested samples of this component and has concluded that they meet the UL requirements. This protects the quality and integrity of the enclosure and provides guarantee of safe performance.

Example Graphics MCS-NitroMag-15.4

15.4 Touchscreen

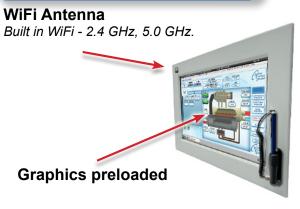



Modbus RTU Master programmed in Firmware Supports up to 10 Modbus devices e.g., VFD's KW Meter, Compressors.

2 HDMI ports (1 Standard & 1 Micro)

The MCS-NitroMag-15.4 capacitive touchscreen interface designed to simplify user access with the MCS-Magnum, MCS- NitroMag and MicroMag utilizing MCS-Connect to provide both graphics and service mode access to technicians. Input method: Finger, glove, stylus.

Highly accurate and does not require calibration - easy to clean glass surface. Works outdoors, bright screen, water resistant, Exceptional Optics - 1280x800 resolution, sharp and vibrant images.

With the new Graphical Interface and MCS-CONNECT, you now have a better view of your controller's many functions as shown on the screens.

MCS-MCS-NitroMag-15.4 comes preloaded with the MCS-CONNECT program that allows you to view the 'unit's status', 'extended history', 'alerts', 'alarms', setpoints, and more, all in a user-friendly graphic format.


The basic graphics package is pre-installed and can be customized by OEMs with the MCS Graphic Builder or custom built by MCS for your controllers.

Standard screens include:

- · System Overview Screen
- Compressor Overview Screen
- Evaporator/Condenser Overview Screen
- · Documents





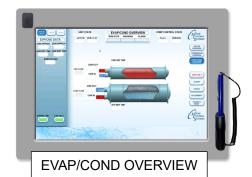



Example Typical Upgrade with Optional Boards



MCS-NitroMag-N

The **MCS-NitroMag-N** is a control system containing a processor, memory, eMMC Flash, and supporting power circuitry. The Broadcom quadcore processor delivers a blazing speed of 1.5GHz.

The MCS-NitroMag-N controller connects with MCS Expansion boards and Extension boards, allowing for a maximum of 144 SI inputs, 90 RO outputs, and 36 AO outputs.

The MCS-NitroMag-N comes with a built-in WiFi interface for Ethernet connectivity, and an onboard WiFi antenna connection.

MCS-IO-Base & MCS-IO-EXT

MCS-IO-BASE has a stand-alone microprocessor which communicates with a MCS-NitroMag over the MCS-I/O port at 38,400 baud. The MCS-IO-BASE has 16 SI inputs, 10 RO outputs, and 4 AO outputs. All data is check summed with auto error correction. Each MCS-IO-BASE board can be powered by a 12VDC regulated power supply and has a automatic power fail reset system.



The MCS-IO-EXT provides a flexible and cost effective way to allow relay output, sensor input and analog output expansion for MCS-NitroMag. Each MCS-IO-EXT can be paired with a MCS-IO-BASE to double the number of inputs and outputs.



MCS-SI-Base & MCS-SI-EXT


The MCS-SI-BASE provides a flexible and cost effective way to allow sensor input and analog output expansion for the MCS-NitroMag. Each MCS-SI-BASE has a stand-alone microprocessor which communicates with the MCS-Nitromag over the MCS-I/O port at 38,400 baud. The MCS-SI-BASE has 16 SI inputs and 4 AO ouputs. All data is check summed with auto error correction. MCS-SI-BASE

board can be powered by a 12VDC regulated power supply and has a automatic power fail reset system.

The MCS-SI-EXT provides a flexible and cost effective way to allow sensor input and analog output expansion for the MCS MAGNUM. Each MCS-SI-EXT can be paired with a MCS-SI-BASE to double the number of inputs and outputs.

MCS-RO-Base & MCS-RO-EXT

The MCS-RO-BASE provides a flexible and cost effective way to allow relay output expansion for the MCS-Nitromag. Each MCS-RO-BASE has a stand-alone microprocessor which communicates over the MCS-I/O port at 38,400 baud. All data is check summed with auto error correction. Because

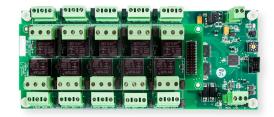

the communication is over a RS-485 long distance two-wire differential network transmission system, the MCS-RO-BASE may be located up to 5,000 feet away.

The MCS-RO-BASE board is powered by a 12VDC regulated power supply.

The MCS-RO-EXT provides a flexible and cost effective way to allow relay output expansion for the MCS NitroMag.

Each MCS-RO-EXT can be paired with a MCS-RO-BASE to double the number of outputs.

Example Typical Control Upgrade

MCS-PRESSURE TRANSDUCERS



The MCS Pressure Transducers are one of the most economical and durable options on the market for dealing with high-pressure industrial applications.

In addition to being CE and UL approved, MCS transducers are capable of surviving high vibration. They include a cavity built out of solid 17-4 PH stainless steel 1/4" SAE Female Flare fitting & Schrader valve; 7/16-20 UNF pipe thread which creates a leak-proof, all metal sealed system that makes the transducers ideal for use with rugged HVAC environments.



MCS-T100

An extremely fast acting temperature sensor built for demanding environments. It is ideal for high moisture locations with continuous freeze and thaw cycles. The sensor is potted with a thermally conductive RTV Cure Silicon Adhesive to guarantee durability and response. Its high accuracy allows for interchangeability in the field. The large resistance range allows the use of over 1000' of cable with no noticeable effect. The MCS-T100 sensor has the ability to move from 32°F to 212°F in approximately 10 to 15 seconds.

MCS-Wells/Tubes

The MCS-WELL was designed to be used with the MCS-T100 temperature sensor, although it has other applications. It is used in the 23XL series chillers in the chilled water and condenser water lines. It comes pre-filled with heat conductive compound to aid in temperature to the sensor.





The **MCS-TUBE** can be epoxied to a discharge or suction line on the 23XL series chillers in order to obtain temperature readings without the use of a well. It was designed to be used with the MCS-T100 temperature sensor and comes pre-filled with heat conductive compound to aid in transferring temperature to the sensor.



MCS-USB-RS485

The MCS-USB-RS485 is a USB to RS485 cable that provides a fast simple way to connect a MCS-MAGNUM to a Laptop or PC.

The MCS-USB-RS485 cable contains a small internal electronic circuit board, which converts USB to RS485 with LED indicators for transmit (TX=Red) and receive (RX=Green).

Example Typical Control Upgrade

MCS-EPOXY

- Pre-measured resins and hardeners in one tube
- Easy to use bonds, seals, plugs, molds and rebuilds
- No special tools needed
- Can even harden under water



| • | Pressure tested to | 1300 psi |
|---|-----------------------|-----------------------|
| • | Temperatures up to | 500 degree F |
| • | Color | Gray |
| • | Density | 15.9 lb/gal (1.9 g/cd |
| • | Hardness (Shore D) | 85 |
| • | Tensile Strength | 6000 psi |
| • | Compressive Strength | 18.000 psi |
| • | Modulus of Elasticity | 6 x 105 psi |
| • | Shear Strength | 700 psi |



MCS-CT500

MCS-CT500 current sensor monitors current flowing to electrical equipment. The magnitude of the current is converted to a linear output voltage between 0.06 to 4.52vdc which can be read as a standard analog input signal. The signal is used by MCS micro controllers for the following:


- 1. For slide valve control on screw machines
- 2. For high amp motor overload protection
- 3. For verification of device on / off

MCS-VOLTAGE-3PH

The **MCS-VOLTAGE-3PH** measures AC voltage between 200-600 AC. It is designed to monitor the voltage of each phase of the main input power to the unit.

The MCS-VOLTAGE-3PH sensor provides three separate DC voltage outputs that correspond to the AC voltage it is measuring.



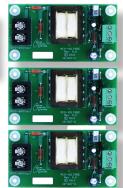



MCS-PHASE-B

The MCS-PHASE-B is a programmable 3-phase line voltage monitor, high temperature LCD display, easy setup and clear diagnostic readout of system faults. The MCS-PHASE-B was specifically designed to protect motors and other 3-phase loads from premature failure and damage due to common voltage faults such as unbalance, over/under voltage, phase loss, reversal, incorrect sequencing and rapid short cycling.

Relay Outputs (MCS-IO-BASE)

| # | Output Name | Туре | Description |
|------|-------------|------------|---|
| 1-1 | Comp Enbl | Standard | Compressor Enable - Turns Compressor On |
| 1-2 | Spare | X | Not Used - Reserved for Expansion |
| 13 | Open Vane | Standard | Vane Open: Relay output used to open the compressor guide vane. |
| 1-4 | Close Vane | Standard | Vane Closed: Relay output used to close the compressor guide vane. |
| 1-5 | Oil Pump | Standard | Oil Pump: Turn ON or OFF |
| 1-6 | Oil Heater | Standard | Oil Heater: Turn ON or OFF |
| 1-7 | Spare | X | Not Used - Reserved for Expansion |
| 1-8 | Spare | X | Not Used - Reserved for Expansion |
| 1-9 | Spare | X | Not Used - Reserved for Expansion |
| 1-10 | PurgEnabl | User Logic | Purge enable: this relay will be turned ON when the compressor turns on allowing the purge to run |

Relay Outputs (MCS-IO-EXT)

| 2-1 | Spare | Χ | Not Used - Reserved for Expansion |
|------|------------|------------|--|
| 2-2 | WarnLight | Standard | Warning Light: unit is in a safety condition prior to a Safety Shutdown. |
| 2-3 | AlarmLight | Standard | Alarm Light: Unit is in a Safety Shutdown |
| 2-4 | RunStatus | User Logic | Hardwired or BMS point to notify BMS that the unit is running |
| 2-5 | VentLine | User Logic | Vent line: Turn ON or OFF |
| 2-6 | Spare | X | Not Used - Reserved for Expansion |
| 2-7 | Spare | X | Not Used - Reserved for Expansion |
| 2-8 | ChilWtrPmp | Standard | Chilled Water Pump: Turn ON or OFF |
| 2-9 | Spare | X | Not Used - Reserved for Expansion |
| 2-10 | CndWtrPump | User Logic | Condenser Pump: Turn ON or OFF |

Relay Outputs (MCS-RO-BASE)

| 3-1 | Spare | Х | Not Used - Reserved for Expansion |
|------|-------|---|-----------------------------------|
| 3-2 | Spare | X | Not Used - Reserved for Expansion |
| 3-3 | Spare | X | Not Used - Reserved for Expansion |
| 3-4 | Spare | X | Not Used - Reserved for Expansion |
| 3-5 | Spare | X | Not Used - Reserved for Expansion |
| 3-6 | Spare | X | Not Used - Reserved for Expansion |
| 3-7 | Spare | X | Not Used - Reserved for Expansion |
| 3-8 | Spare | X | Not Used - Reserved for Expansion |
| 3-9 | Spare | X | Not Used - Reserved for Expansion |
| 3-10 | Spare | X | Not Used - Reserved for Expansion |

| Relay Outputs (MCS-RO-EXT) | | | |
|----------------------------|-------------|------------|------------------------------------|
| # | Output Name | Туре | Description |
| 4-1 | Spare | Х | Not Used - Reserved for Expansion |
| 4-2 | Spare | Х | Not Used - Reserved for Expansion |
| 4-3 | HwBMS R/S | User Logic | Hardwired BMS Run/Stop |
| 4-4 | NtBMS R/S | User Logic | Virtual Network Point for Run/Stop |
| 4-5 | Spare | Х | Not Used - Reserved for Expansion |
| 4-6 | Spare | Х | Not Used - Reserved for Expansion |
| 4-7 | Spare | Х | Not Used - Reserved for Expansion |
| 4-8 | DisHwRst | User Logic | Disallow Hardwired Reset |
| 4-9 | DisNetRst | User Logic | Disallow Network Reset |
| 4-10 | Spare | Х | Not Used - Reserved for Expansion |

Sensor Inputs(MCS-IO-BASE)

| # | Output Name | Туре | Description |
|------|-------------|--------------|--------------------------------------|
| 1-1 | ChilWtrIn | MCST100 | Chilled Water In Temperature |
| 1-2 | ChilWtrOut | MCST100 | Chilled Water Leaving Temperature |
| 1-3 | CndWtrln | MCST100 | Condenser water incoming temperature |
| 1-4 | CndWtrOut | MCST100 | Condenser water leaving temperature |
| 1-5 | CndLevel | User Defined | Condenser Level Sensor |
| 1-6 | LoPsi SW 1 | DIGITAL | Mechanical Low Psi Switch Comp 1 |
| 1-7 | HiPsi SW 1 | DIGITAL | Mechanical High Psi Switch Comp 1 |
| 1-8 | LoPsi SW 2 | DIGITAL | Mechanical Low Psi Switch Comp 2 |
| 1-9 | HiPsi SW 2 | DIGITAL | Mechanical High Psi Switch Comp 2 |
| 1-10 | LoPsi SW 3 | DIGITAL | Mechanical Low Psi Switch Comp 3 |
| 1-11 | HiPsi SW 3 | DIGITAL | Mechanical High Psi Switch Comp 3 |
| 1-12 | CndFlow | DIGITAL | Monitors the condenser flow |
| 1-13 | ChwFlow | DIGITAL | Monitors the chilled water flow |
| 1-14 | Phaseloss | DIGITAL | Phase loss: phase imbalance |
| 1-15 | Run/Stop | DIGITAL | Run/Stop/Hand Switch |
| 1-16 | Emg/Stop | DIGITAL | Emergency Stop Switch |

Sensor Inputs (MCS-IO-EXT)

| # | Output Name | Туре | Description |
|------|-------------|------------|-------------------------------------|
| 2-1 | CndRefTmp | MCST100 | Condenser Refrigerant Temperature |
| 2-2 | EvpRefTmp | MCST100 | Evaporator Refrigerant Temperature |
| 2-3 | CmpAmpsA | CT-750 | Reads Amp Draw on Leg 1 |
| 2-4 | CmpAmpsB | CT-750 | Reads Amp Draw on Leg 2 |
| 2-5 | CmpAmpsC | CT-750 | Reads Amp Draw on Leg 3 |
| 2-6 | UnitVolts | User Logic | Unit Volts |
| 2-7 | Spare | X | Not Used - Reserved for Expansion |
| 2-8 | Spare | X | Not Used - Reserved for Expansion |
| 2-9 | HiPsiSW | Digital | Mechanical Hi Pressure Safety |
| 2-10 | Spare | X | Not Used - Reserved for Expansion |
| 2-11 | StartFault | Digital | Starter Fault |
| 2-12 | Spare | X | Not Used - Reserved for Expansion |
| 2-13 | M IGV1STPS | MODBUS | Inlet Guide Vane Steps-Compressor 1 |
| 2-14 | SPARE 2-14 | SPARE | Sensor input not used |
| 2-15 | SPARE 2-15 | SPARE | Sensor input not used |
| 2-16 | SPARE 2-16 | SPARE | Sensor input not used |

Sensor Inputs (MCS-SI-BASE)

| 3-1 | Spare | X | Not Used - Reserved for Expansion |
|------|------------|---------|---|
| 3-2 | Spare | X | Not Used - Reserved for Expansion |
| 3-3 | Spare | X | Not Used - Reserved for Expansion |
| 3-4 | PrgFlotBot | Digital | Purge Float Bottom. Oil level in Purge Canister. |
| 3-5 | PrgFlotTop | Digital | Purge Float Top. Oil level in Purge Canister. |
| 3-6 | Purge PSI | TI-150A | Purge Pressure. Pressure in Canister |
| 3-7 | ChlWtrFlow | Digital | Proof for Chilled Water Flow |
| 3-8 | CndWtrFlow | Digital | Verifies that Condenser Pump is running |
| 3-9 | Spare | X | Not Used - Reserved for Expansion |
| 3-10 | CndWtrln | MCST100 | Condenser Water Incoming Temperature |
| 3-11 | CndWtrOut | MCST100 | Condenser Water Leaving Temperature |
| 3-12 | Spare | Х | Not Used - Reserved for Expansion |
| 3-13 | HwBmsDmd | DEMAND% | Hardwired Point for Demand % |
| 3-14 | HwBmsChwr | TRGTRST | Hardwired BMS Chilled Water Reset: Reset Target Temperature |
| 3-15 | Spare | Х | Not Used - Reserved for Expansion |
| 3-16 | SPARE 3-16 | SPARE | Sensor input not used |

Sensor Inputs (MCS-SI-EXT)

| # | Output Name | Type | Description |
|------|-------------|--------------|-----------------------------------|
| 4-1 | VfdFault | Digital | VFD Alarm |
| 4-2 | VfdHertz | User Defined | Hardwired or through modbus |
| 4-3 | VfdKW | User Defined | Hardwired or through modbus |
| 4-4 | VfdVolts | User Defined | Hardwired or through modbus |
| 4-5 | Spare | Х | Not Used - Reserved for Expansion |
| 4-6 | Spare | Х | Not Used - Reserved for Expansion |
| 4-7 | Spare | Х | Not Used - Reserved for Expansion |
| 4-8 | Spare | Х | Not Used - Reserved for Expansion |
| 4-9 | Spare | Х | Not Used - Reserved for Expansion |
| 4-10 | Spare | Х | Not Used - Reserved for Expansion |
| 4-11 | Spare | Х | Not Used - Reserved for Expansion |
| 4-12 | UnitInL/O | User Logic | Tests for Unit in Lock Out |
| 4-13 | CtlRun/Stop | User Logic | Control Run/Stop |
| 4-14 | Spare | Х | Not Used - Reserved for Expansion |
| 4-15 | SPARE 4-15 | SPARE | Sensor input not used |
| 4-16 | SPARE 4-16 | SPARE | Sensor input not used |

Sensor Inputs (virtual board)

| 5-1 | Spare | Х | Not Used - Reserved for Expansion |
|------|------------|------------|--|
| 5-2 | Spare | Х | Not Used - Reserved for Expansion |
| 5-3 | Spare | X | Not Used - Reserved for Expansion |
| 5-4 | ChwGPM | User Logic | Chilled Water Gallons per Minute |
| 5-5 | NetBmsRun | BMS_SI | Virtual Network Point for Run/Stop |
| 5-6 | NetBmsDmd | BMS_SI | Virtual Network Point for Demand % |
| 5-7 | NetBmsChwr | BMS_SI | Virtual Network Point for Chilled Water Reset: Reset Target Temp |
| 5-8 | Fla% | User Logic | Full Load Amp % Calculation |
| 5-9 | Lift | User Logic | Lift Calculation |
| 5-10 | ChwAppr | User Logic | Chilled Water Approach: Difference between refrigerant temperature/leaving water temperature |
| 5-11 | ChwDiffTmp | User Logic | Chilled Water Temperature Differential: Difference between entering/leaving temperature |
| 5-12 | CdwAppr | User Logic | Chilled Water Approach: Difference between refrigerant temperature/leaving water temperature |
| 5-13 | CdwDiffTmp | User Logic | Condenser Differential Temperature: Difference between leaving/entering temperature |
| 5-14 | Spare | Х | Not Used - Reserved for Expansion |
| 5-15 | Subcooling | User Logic | Subcooling Calculation |
| 5-16 | Spare | Х | Not Used - Reserved for Expansion |

Sensor Inputs (MCS-SI-BASE #2)

| # | Output Name | Туре | Description |
|------|-------------|------------|--|
| 6-1 | Spare | Х | Not Used - Reserved for Expansion |
| 6-2 | Spare | Х | Not Used - Reserved for Expansion |
| 6-3 | Spare | Х | Not Used - Reserved for Expansion |
| 6-4 | Unit Tons | TONS | Unit Tons |
| 6-5 | Unit KW | KW | Unit KW |
| 6-6 | KW/Tons | User Logic | Unit KW/Ton Calculation |
| 6-7 | PwrFactor | User Logic | Power Factor Calculation |
| 6-8 | Spare | Х | Not Used - Reserved for Expansion |
| 6-9 | CtlFlow | User Logic | Control Flow - Tests both Condenser and Chilled Water Flow |
| 6-10 | Spare | X | Not Used - Reserved for Expansion |
| 6-11 | SPARE 6-11 | SPARE | Sensor input not used |
| 6-12 | SPARE 6-12 | SPARE | Sensor input not used |
| 6-13 | SPARE 6-13 | SPARE | Sensor input not used |
| 6-14 | SPARE 6-14 | SPARE | Sensor input not used |
| 6-15 | SPARE 6-15 | SPARE | Sensor input not used |
| 6-16 | SPARE 6-16 | SPARE | Sensor input not used |

Sensor Inputs (virtual board)

| # | Output Name | Туре | Description |
|------|-------------|------------|--|
| 7-1 | Spare | Х | Not Used - Reserved for Expansion |
| 7-2 | Spare | Х | Not Used - Reserved for Expansion |
| 7-3 | Spare | Х | Not Used - Reserved for Expansion |
| 7-4 | Spare | Х | Not Used - Reserved for Expansion |
| 7-5 | Spare | Х | Not Used - Reserved for Expansion |
| 7-6 | HwBmsDMD | User Logic | Hardwired Point for Demand % |
| 7-7 | HwBmsReset | User Logic | Hardwired Point for Target Reset |
| 7-8 | NetBmsDMD | User Logic | Virtual Network Point for Demand % |
| 7-9 | NetBmsReset | User Logic | Virtual Network Point for Target Reset |
| 7-10 | BMS R/S | User Logic | Virtual Network Point for Run/Stop |
| 7-11 | BMS DMD | User Logic | Virtual Network Point for Demand % |
| 7-12 | BMS Reset | User Logic | Virtual Network Point for Target Reset |
| 7-13 | d/aHwRst | User Logic | Disallow Hardwired Reset |
| 7-14 | d/aNetRst | User Logic | Disallow Network Reset |
| 7-15 | Spare | Х | Not Used - Reserved for Expansion |
| 7-16 | Spare | X | Not Used - Reserved for Expansion |

Analog Outputs (MCS-IO-BASE)

| 1-1 | Demand 2% | Compressor 2 Speed Demand |
|-----|-----------|---------------------------|
| 1-2 | SPARE2-2 | Analog input not used |
| 1-3 | SPARE2-3 | Analog input not used |
| 1-4 | SPARE2-4 | Analog input not used |

Notes


Sample Questionnaire

Visit https://www.mcscontrols.com/brochures.html for a fillable form to email to sales@mcscontrols.com

| Company: | | Phone: | | | | |
|--|---|--|-------------|--|--|--|
| Name: | Title: | Email: | | | | |
| Mobile:Site: | | | | | | |
| Unit Information | | | | | | |
| Installation Site Name | | | | | | |
| Model # | Unit Serial | # | Site Unit # | | | |
| What is the Voltage of the Unit? 208V, 230V, 460V, 4160V, Other Voltage | | | | | | |
| What is the Control voltage in the unit? | | | | | | |
| Is MCS monitoring Main Voltage? Yes No. Will Phase loss need to be monitored? Yes No. | | | | | | |
| Network Information | | | | | | |
| Integrating to Building Management System | n (BMS) Yes No, If | f yes, complete the form provided on | page 2. | | | |
| Motor Information | | | | | | |
| t. What is the Starter Type? و v e mor roung the mansi on كالا الله على الله على الله الله الله الله الله الله الله ال | | | | | | |
| a. Does the Compressor | what is the Starter Type?a. Does the Compressor No. | | | | | |
| . Is there a Variable Frequency Deep A Ry A D CLICK ON THE | | | | | | |
| a. What is the VFD Make and Model? VFD Make | | | | | | |
| b . Will the VFD be hardwired to MCS | OtR, of ODE B | ELOW | | | | |
| c. Is MCS required to control VFD Cab | inet Auxiliary Fan? Yes | No. | | | | |
| 4. What are the Motor "RUN LOAD AMPS'(FLA)? COMP 1 : | | | | | | |
| 5. Is Hot Gas Bypass present? | | | | | | |
| Purge Information | | | | | | |
| 6. What is the Purge Type on the unit, how is it controlled? | | | | | | |
| Evap/Condenser/Pump Information | | | | | | |
| 7. Is MCS controlling the chiller Water Pump(| s)? Yes No, How will | they be wired? | | | | |
| 8. Is MCS controlling the Condenser water Pu | Is MCS controlling the Condenser water Pump(s)? Yes No, How will they be wires? | | | | | |
| Is MCS controlling Condenser/Evaporator Isolation Valve? Yes No BMS. | | | | | | |
| 10. Is MCS controlling tower fan(s)? | ☐ No, How many are there _ | , how are they wired? | | | | |
| 11. Will the Chilled/Condenser Water Flow be | measured by? | | | | | |
| Ambient Information | | | | | | |
| 12. Will Ambient temperature need to be monit | ored? Yes No. | | | | | |
| CVHA Information Only | | | | | | |
| 13. Is there a Motor Cooler? Yes No, Will MCS be monitoring the Oil Feed? Yes No, Return Tem | | | | | | |
| Click for Brochure Upgrades | | | | | | |
| | Click lot E | —————————————————————————————————————— | | | | |
| 1. Viewing form printed Brochure, Scan QR coo | le from mobile device, email the form to y | our email address. | | | | |

- 2. Click on the emailed link. Fill out the digital fillable form on a computer and email to sales@mcscontrols.com
- 3. Viewing brochure from Computer, click on QR code, find the form your need, click on fillable form, fill out and email to sales@mcscontrols.com



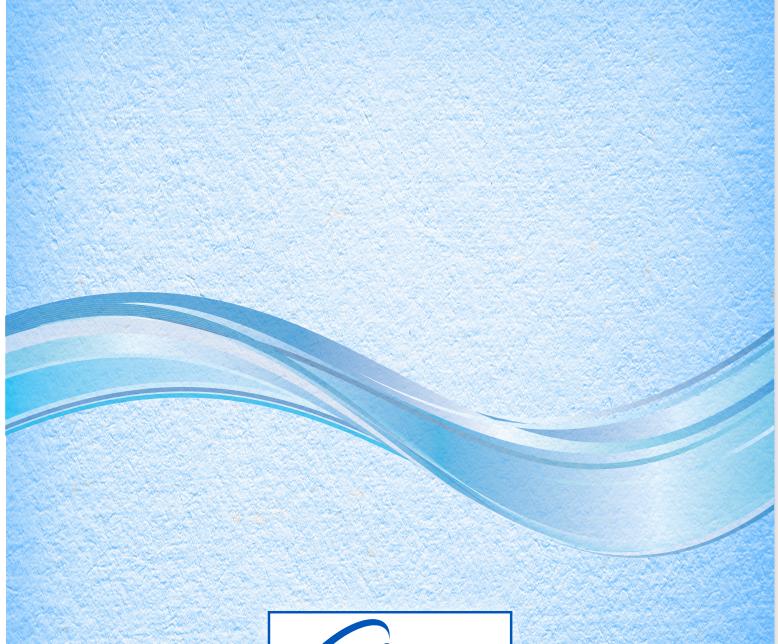



5580 Enterprise Pkwy., Fort Myers, FL 33905 Office: 239-694-0089 • Fax: 239-694-0031 www.mcscontrols.com